



GRAFENTHAL®
IT PRODUCTS • GERMANY

Handbuch

GRAFENTHAL
R2108 S2


Table of Content

Copyright Introduction	1
Abstract	3
Target Audience	3
Table of Content	1
1 Safety Introduction	3
2. Product Specification Introduction	7
2.1 Introduction	7
2.2 Features and Specification	8
2.3 Front Panel	11
2.3.1 2.5x8 Disk Position	11
2.3.2 Indicators on Hard Disk Bracket	12
2.4 Rear Panel	13
2.5 Mainboard Layout	14
2.6 Mainboard Jumper Introduction	16
3 BIOS Configuration	17
3.1 System BIOS Configuration Methods	17
3.2 BIOS Configuration	18
3.2.1 Main Menu	18
3.2.2 Advanced Menu	19
3.2.3 Chipset Menu	26
3.2.4 Server Mgmt	41
3.2.5 Security Menu	50
3.2.6 Boot Menu	50
3.2.7 Save & Exit Menu	52
3.3 Firmware Update	52
4 BMC Configuration	56
4.1 Introduction	56
4.2 Functional Modules	57
4.2.1 Module Composition	57
4.2.2 IPMI Module Introduction	57
4.2.3 Command Line Function Introduction	57
4.2.4 Remote Control Module Introduction	58
4.3 Web Interface Introduction	58
4.3.1 Login Web Interface	58




4.3.2	Web Interface Introduction	59
4.3.4	System Information.....	60
4.4	Remote Control	62
4.5	Power Supply and Heat Radiation	64
4.6	BMC Configuration	65
4.7	Logs.....	69
4.8	Fault Diagnosis.....	70
4.9	System Maintenance.....	71
4.10	Command Line Function Introduction	72
4.10.1	Command line login:.....	73
4.10.2	Command Line Function Introduction	Fehler! Textmarke nicht definiert.
4.11	Time Zone Table	Fehler! Textmarke nicht definiert.
5	Hardware Maintenance	74
5.1	Tool Preparation	74
5.2	Parts Replacement.....	74
5.2.1	Processor Replacement	74
5.2.2	Memory Replacement	76
5.2.3	Hard Disk Replacement	77
5.2.4	Power Replacement	78
5.2.5	Chassis Cover Replacement.....	79
5.2.6	System Fan Replacement	80
5.2.7	Replace Riser Card and PCIE Expansion Card	80
5.2.8	Wind Scooper Replacement.....	81
5.2.9	Mainboard Replacement	81
5.2.10	Replace Hard Disk Backplane	82
6.	Frequent Faults, Diagnosis and Troubleshooting.....	83
6.1	Frequent Faults	83
6.2	Diagnosis and Exclusion Instructions	84
7	Specifications	87
7.1	USA FCC Statement.....	87
7.2	CE Statement of EU	87
7.3	China CCC	87
7.4	China Environmental Symbols	88

1. Safety Introduction

 **Warning:** the following warnings show that there are potential dangers that may cause property loss, personal injury or death:

- 1 The power supply equipment in the system may generate high voltage and dangerous electrical energy and thus cause personal injury. Please do not dismount the cover of the host or to dismount and replace any component in the system by yourself, unless otherwise informed by the distributor; only maintenance technicians trained by the distributor have the right to disassemble the cover of the host, dismount and replace the internal components.
- 2 Please connect the equipment to appropriate power supply, and the power should be supplied by external power supply which is indicated on the rated input label. To prevent your equipment from damages caused by momentary spike or plunge of the voltage, please use relevant voltage stabilizing equipment or uninterruptible power supply equipment.
- 3 If extended cables are needed, please use the three-core cables matched with correct earthed plug, and check the ratings of the extended cables to make sure that the sum of rated current of all products inserted into the extended cables do not exceed 80% of the limits of the rated currents of the extended cables.
- 4 Please be sure to use the supplied power supply component, such as power lines, power socket (if supplied with the equipment) etc. For the safety of equipment and the user, do not replace randomly power cables or plugs.
- 5 To prevent electric shock dangers caused by leakage in the system, please make sure that the power cables of the system and peripheral equipment are correctly connected to the earthed power socket. Please connect the three-core power line plug to the three- core AC power socket that is well earthed and easy to access, be sure to use the earthing pin of power lines and do not use the patch plug or the earthing pin unplugged with cables. In case of the earthing conductors not installed and it is uncertain whether there are appropriate earthing protections, please do not operate or use the equipment. Contact and consult with the electrician.
- 6 To avoid short circuit of internal components and fire or electric shock hazards, please do not fill any object into the open pores of the system.

- 7 Please place the system far away from the cooling plate and at the place with heat sources, and be sure not to block the air vents.
- 8 Be sure not to scatter food or liquid in the system or on other components, and do not use the product in humid and dusty environment.
- 9 The replacement of batteries with those of another model may cause explosion. When replacement of batteries is required, please consult first the manufacturer and choose batteries of the same or a similar model recommended by the manufacturer. Do not dismount, extrude and pink the batteries or make the external connection point short circuit, and do not expose them in the environment over 60°C. Never throw them into fire or water. Please do not try to open or repair the batteries, and be sure to reasonably deal with the flat batteries and do not put the fl at batteries, the circuit boards that may include the batteries and other components with other wastes. For relevant battery recovery, please contact the local waste recovery and treatment mechanism.
- 10 Before installing equipment in the chassis, please install front and side supporting feet on the independent chassis; for cabinet connecting with other chassis, it shall install the front supporting foot first. If you fail to install correspondingly the supporting foot before installing equipment in the chassis, it may cause the cabinet to turn over in some cases, and thus may cause personal injury. Therefore, it is necessary to install supporting feet before installing equipment in the chassis. After installing the equipment and other components in the chassis, it can only pull out one component from the cabinet through its sliding component at one time. Pulling out several components at the same time may lead the cabinet to turn over and cause serious personal injury.
- 11 Please do not move the chassis independently. Considering the height and weight of the chassis, at least two people are needed to complete its movement.
- 12 Please do not carry out direct contact operation on power copper busbar when the cabinet is powered on, and it is prohibited to carry out direct short circuit of power copper busbar.
- 13 The product is Grade A product, and in the living environment, it may cause radio interference. In such case, it may need the user to take feasible measures for the interference.

 **Note:** In order to help you use the equipment, the following considerations can help avoid the occurrence of problems that may damage the components or cause data loss etc.

- 1 In case of the following cases, please unplug the power line plug of products from the power socket and contact customer service department of the distributor:
 - 1)The power cables, extended cables or power plugs are damaged.
 - 2)The products get wet by water.
 - 3)The products have fallen off or been damaged.
 - 4)Objects fall into the products.
 - 5)When operating according to the operation instructions, the products cannot function normally.
- 2 If the system becomes damp, please dispose according to the following steps:
 - 1)Switch off the power supplies of the system and the equipment, disconnect them with the power socket, wait for 10 to 20 minutes, and then open the cover of the host.
 - 2)Move the equipment to the ventilation place to dry the system at least for 24 hours and make sure that the system is fully dried.
 - 3)Close the cover of the host, re-connect the system to the power socket, and then start the equipment.
 - 4)In case of operation failure or abnormal situation, please contact the distributor and get technical support.
- 3 Pay attention to the position of the system cables and power cables, wire them in places not to be stepped on or knocked down and ensure not to place other objectives on the cables.
- 4 Before dismounting the cover of host or contacting the internal components, you shall cool down the equipment first; to avoid damaging the main-board, please power off the system and wait for 5 seconds, and then dismount the components from the main-board or disconnect the connection of peripheral equipment of the system.
- 5 If there are modulator-demodulator, telecommunication or local area network options in the equipment, please pay attention to the following matters:
 - 1)In case of thunder and lightning weather, please do not connect or use the modulator-demodulator. Otherwise, it may be subject to lightning strike.
 - 2)Never connect or use modulator-demodulator in moist environment.
 - 3)Never insert the modulator-demodulator or telephone cables to the socket of network interface controller (NIC).
 - 4)Before unpacking the product package, contacting or installing internal components

or contacting un-insulated cables or jacks of the modulator-demodulator, please disconnect the modulator-demodulator cables.

- 6 In order to prevent the electrostatic discharge from damaging the electronic components in the equipment, please pay attention to the following matters:
 - 1) You shall conduct off the static electricity on the body before dismounting or contacting any electronic component in the equipment. You can conduct off the static electricity on the body by contacting the metal earthing objects (such as the unpainted metal surface on the chassis) to prevent the static electricity on the body from conducting itself to the sensitive components.
 - 2) For electrostatic sensitive components not ready to be installed for application, please do not take them out from the antistatic package materials.
 - 3) During the work, please touch the earthing conductor or the unpainted metal surface on the cabinet regularly to conduct off the static electricity on the body that may damage the internal components.
- 7 When dismounting the internal components with the approval of distributor, please pay attention to the following matters:
 - 1) Switch off the system power supply and disconnect the cables, including disconnecting any connection of the system. When disconnecting the cables, please grab the connector of cables and plug it out, and never pull the cables.
 - 2) Before dismounting the cover of cabinet or touching the internal components, the products need to be cooled down.
 - 3) Before dismounting and touching any electronic component in the equipment, you shall conduct off the static electricity on the body by touching the metal earthing objectives.
 - 4) During the dismounting process, the operation shall not be too big, so as to prevent damage to the components or scratching of the arms.
 - 5) Carefully deal with the components and plug-in cards, and please never touch the components or connection points on the plug-in cards. When taking the plug-in cards or components, you should grab the edges of the plug-in cards or components or their metal fixed supports.
- 8 During the process of cabinet installation and application, please pay attention to the following matters:
 - 1) After the installation of cabinet is finished, please ensure that the supporting feet have been fixed to the rack and supported to the ground, and all weight of the rack have been fell onto the ground.
 - 2) It shall install into the cabinet according to the sequences from the bottom to the top, and first install the heaviest component.
 - 3) When pulling out the components from the cabinet, it shall apply force slightly to ensure the cabinet to keep balance and stabilization.
 - 4) When pressing down the release latch of the sliding rail of components and sliding in or out, please be careful, as the sliding rail may hurt your figures.
 - 5) Never make the AC power branch circuit in the cabinet overload. The sum of cabinet load shall not exceed 80% of the ratings of branch circuits.
 - 6) Ensure that components in the cabinet have good ventilation.
 - 7) When repairing components in the cabinet, never step on any other components.

2. Product Specification Introduction

2.1 Introduction

This type is a kind of server product developed independently. It adopts Intel Grantley- EP platform, and uses Wellsburg chip set. It supports two mainstream Intel Xeon E5-26** V3 series processors. It supports 16 DIMM DDR4 memory, up to 2133MHz. It supports ECC Registered and multiple senior memory redundancy functions. It supports up to 2.5" x8 SAS/SATA/SSD hot-plugging hard disks or 3.5" x4 SAS/SATA/SSD hot-plugging hard disks + 2.5" x2 SSD hot-plugging hard disks. Mainboard integrates a Gigabit net card of high performance, and supports network advanced features. Mainboard integrates BMC/KVM chips. 2 PCI-Express expansion slots are available.

Supports SAS 3.0 (12Gb/s) or SAS Raid cards, and implements flexible SAS/SAS RAID solutions. Modular design on components such as structure, storage, PCI expansion, power supply and fan etc. Energy-saving and noise reduction design, equipped with PMbus power supply of high efficiency, supports DPNM function, and implements energy saving and consumption reducing.

- 2.5"×8 configuration (i.e. full configuration)

It supports 8 front set 2.5" SAS/SATA/SSD hard disks, and the related appearance is as shown in the following figure.



2.2 Features and Specification

Processor	
Processor Type	Intel dual-way Xeon E5-26XX V3 Series (supports up to two
145W) Interface	Two Socket-R3 slots.
Chipset	
Chipset Type	PCH C610(Wellsburg)
Memory	
Memory Type	DDR4 ECC RDIMM/LRDIMM
memory Single Inline Memory Module Qty.	16
Memory Volume	It supports up to 1024GB (64GB for single)
I/O Interface	
USB Interface	2 front set USB 3.0 interfaces, 2 built-in USB 3.0 interfaces, and 2 rear set USB 3.0 interfaces.
Display Interface	1 front set VGA interface 1 rear set VGA interface
Serial Interface	1 built-in serial port
ID Indicator Interface	1 ID indicator (blue) and its press button
Display Controller	
Controller Type	Aspeed 2400

SAS Backplane	
SAS3.0 backplane	<p>3.5x4 backplane: The backplane supports 3.5"x4 hard disks, and SAS backplane provides 1 HD Mini SAS interface, 1 8PIN power interfaces; 1 2.5x2 backplane is installed:</p> <p>The backplane supports 2.5"x2 hard disks, and the backplane provides 2 SATA interfaces and 1 4PIN power interfaces; while 1 2.5x8 backplane is installed:</p> <p>The backplane supports 2.5"x2 hard disks, and SAS backplane provides 2 HD Mini SAS interfaces and 1 8PIN power interfaces; while 1 is installed</p>
Network Card	
Network Card Controller	<p>The mainboard is optionally integrated with 1 Intel I350 dual or four Gigabit net card, providing two or four 1000M adaptive RJ45 network ports;</p> <p>The mainboard is optionally integrated with 1 Intel 82599 single-port or dual-port net card, providing one or two 10 gigabit SFP+ network ports.</p>
Management Chip	
Management Chip	It integrates 1 independent 1000Mbps network interface, which is used in IPMI remote management.
PCI Extension Slot	
PCI Extension Slot	<p>Mainboard: 1 onboard PCI Express 3.0 x24 slot (used to support PCI-E Riser, which could not adapt to external cards); 3 vertically inserted PCIE slots;</p> <p>In the system: Single CPU: It could support 1 PCIE x8+x1 slot (able to support network sub card of management function), which transfers via a half- height and half-length PCI-E Riser card.</p> <p>Dual CPUs: Could support 1 PCIE x8+x1 slot (able to support network sub card of management function), which transfers via PCI-E Riser card, and supports half-height and half-length cards. Could support 1 PCIE x16 slot (x16 signal), which transfers via installing one Riser card, and supports full-height and half-length cards.</p>
Hard Disk	
Hard Drive Type	Front set 2.5/3.5 inch SAS and SATA hard disks; Up to 2 front set SSD hard disks could be supported. (Subject to actual type you purchased)

External Storage Driver

CD Driver	It supports Slim SATA interface DVD drive (9.5 mm) External USB CD drive.
Drive U Disk	Optional drive U disk.

Power Supply

Specification	Output power of sing/double power 550W/800W and above; 1+1 redundancy; 2 power modules; it supports PMBus power supply, and implements Node Manager 3.0 function.
---------------	---

Power Input	Please refer to power input on nameplate tag of the host.
-------------	---

Physical Specification


External Dimension of Package	635 width × 215 height × 955 depth (unit: mm)
Host Size	430 width × 44 height × 730 depth (unit: mm)
Product Weight	Gross weight: 26kg. (Gross weight includes: Host + Packing Box + Rail + Parts Kit)

Environment Parameters

Working Environment Temperature	10°C-35°C
Storage & Transportation Temperature	-40°C-55°C
Working Humidity	35% -80% relative
humidity Storage & Transportation Humidity	20% -93% (40°C)relative humidity


2.3 Front Panel

2.3.1 2.5x8 Disk Position

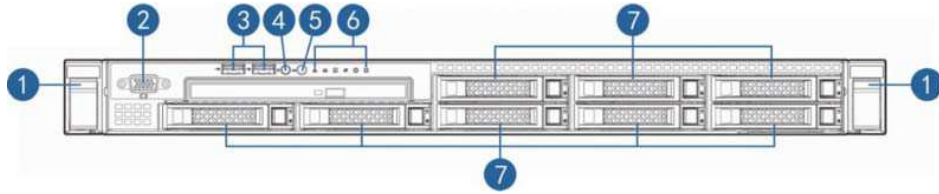


No.	Module Name
1	Securing buckle of server and cabinet
2	Front set VGA interface
3	Front set USB 3.0 interface
4	Server switch button
5	ID light and button
6	See Section 2.3.3 item 4-9.
7	Hard disk slot

2.5x8 disk position hard disk sequence diagram




2.3.2 Indicators on Hard Disk Bracket

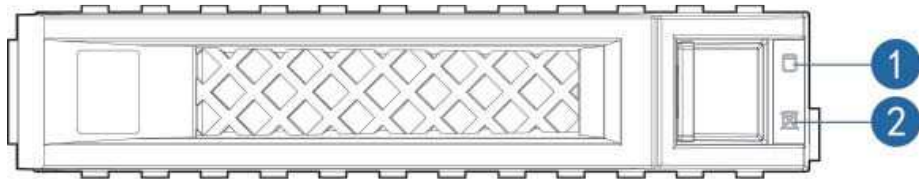


Number	Module Name	Description
1	Hard disk activity status indicator	Constant green: Normal Flashing green: Hard disk is reading and writing
2	Hard disk fault alarming indicator	Constant red: Hard disk fault Constant blue: Hard disk positioning Constant blue: In coordination with RAID rebuilding

2.4 Rear Panel

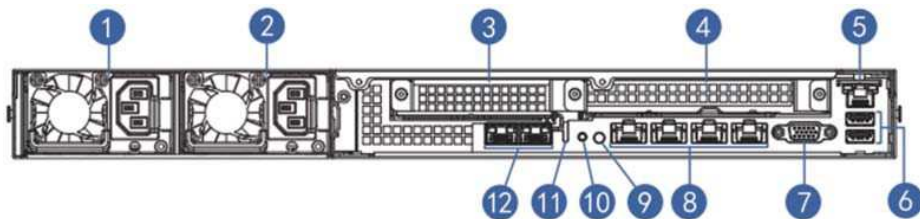

No.	Module Name
1	PSU0
2	PSU1
3	PCIE x8 slots
4	PCIE x16 slots
5	IPMI management ports
6	USB 3.0 ports (2)
7	VGA port
8	Gigabit network port
9	ID light and button
10	BMC Reset Button
11	10 Gigabit net card indicator
12	10 Gigabit net card

2.5 Mainboard Layout

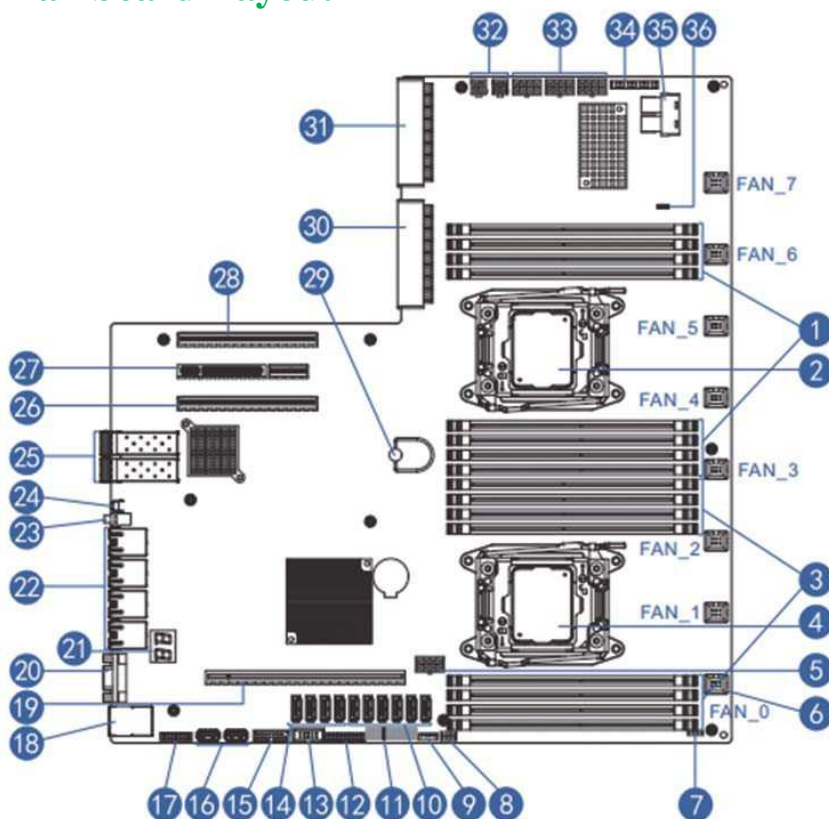

No.	Module Name
1	Memory slot (corresponding with CPU0)
2	CPU0
3	Memory slot (corresponding with CPU1)
4	CPU1
5	GPU Power supply interface
6	System fan interfaces (8 interfaces in all)
7	I2C interface
8	GPIO interface
9	IPMB interface
10	SATA interfaces (6)
11	CLEAR CMOS jumper
12	TCM interface
13	COM interface
14	sSATA interfaces (4)
15	Front set USB 3.0 interface
16	Built-in USB 3.0 interface



17	Front set VGA interface
18	IPMI management interface / rear set USB 3.0 interface (2)
19	PCIEx24 slots (corresponding with CPU1)
20	Rear set VGA interface
21	Debug light
22	Gigabit network port
23	ID light and button
24	BMC Reset button
25	10 Gigabit net port
26	PCIEx16 slots (corresponding with CPU1)
27	PCIEx8 (corresponding with CPU0)
28	PCIEx8 (in x16 slots corresponding with CPU0)
29	Mainboard handle
30	PSU1
31	PSU0
32	Power interface (4 ports)
33	Power interface (8 ports)
34	Front control panel interface
35	LSI 3008 HD mini SAS interface
36	LSI 3008 SAS Key

2.6 Mainboard Jumper Introduction

2.6.1 Clear CMOS Jumper Introduction

See [2.5 Mainboard Layout] for jumper positions.

Jumper No.	Function Description	Jumper Functions
CLR_CMOS jumper	CMOS clear	J46 Short-circuit pin1-2, to restore normal status; short-circuit pin2-3, to clear CMOS.

Note:

It is required to shut down the system, as well as disconnect power supply during CMOS cleaning, and hold for 5 seconds after short-circuiting Pin2-3; then short-circuit Pin1 and Pin2 of CLR_CMOS jumper with a jumper cap (the default status), to restore its original status.

3. BIOS Configuration

This chapter introduces BIOS function setup and mainboard jumper of the server. All operations described in this section are only limited to operators or administrators with system maintenance qualification.

BIOS is a basic input and output system. The system parameter and the hard drive parameter can be adjusted through special set program. BIOS has great influence on the system start and running so that setting parameters improperly may arise the conflict among the hardware resource, or fall down the system run performance. Hence understanding the BIOS setup is significant to the configuration of your server. If no especial requirement, you are suggested to use the default value and not alter the parameters optionally.

Note:

1. Before the server BIOS setup is altered, please record the corresponding original setup. Hence when there are operating problems in the system due to the option altered, the setup can revert.
2. Ordinarily the factory default system value is the optimized setup. Don't try to alter the parameters before you understand their denotations.
3. The common setup is introduced in detail in this paper. The less referred options in the application procedure are simply explained or not.
4. The content of the BIOS is diverse based on the different configurations of the products; hence the detailed introduction is elided.

3.1 System BIOS Configuration Methods

Power on the server, system starts to boot, when the following content appears below the distributor logo on the screen:

“Press to SETUP or <TAB> to POST or <F12> to PXE Boot.”, press [DEL] button, when “Entering Setup...” appears on bottom right on the screen, it will enter system BIOS configuration later, and you could select options using arrow buttons on BIOS main menu to enter sub-menu.

 **Note:** Options in grey are not available. Options with symbol “  ”, have a sub-menu.

Control key instruction table

Press Key	Function
<Esc>	Exit or return from sub-menu to main menu.
<←>or<→>	Select a menu.
<↑>or<↓>	Move the cursor up or down.
<Home>or<End>	Move the cursor to top or bottom of the screen.
<+>or<->	Select the previous or next numerical value or setting of the current one.
<F1>	Help
<F2>	Restore the last configuration.
<F9>	Restore default configuration.
<F10>	Save and exit
<Enter>	execute commands or select a sub-menu.

3.2 BIOS Configuration

3.2.1 Main Menu



Main Menu Interface Instruction Table


Interface Parameters	Function Description
BIOS Information	Displays current BIOS information.
Processor Information	Displays CPU information.
Memory Information	Displays memory volume and current speed.
System Date(Day mm/dd/yyyy)	Displays system time.
System Time (hh/mm/ss)	

3.2.2 Advanced Menu

Advanced Menu Interface Instruction Table

Interface Parameters	Function Description
Trusted Computing	Trustable computing configuration
ACPI Settings	Advanced configuration and power interface settings
AST2400 Super IO Configuration	AST2400 I/O chip parameter configuration
Serial Port Console Redirection	Serial port console redirection
PCI Subsystem Settings	PCI subsystem settings
Network Stack Configuration	Network stack configuration
CSM Configuration	CMS configuration
USB Configuration	USB configuration
Onboard LAN Configuration	Onboard network card configuration


3 Trusted Computing

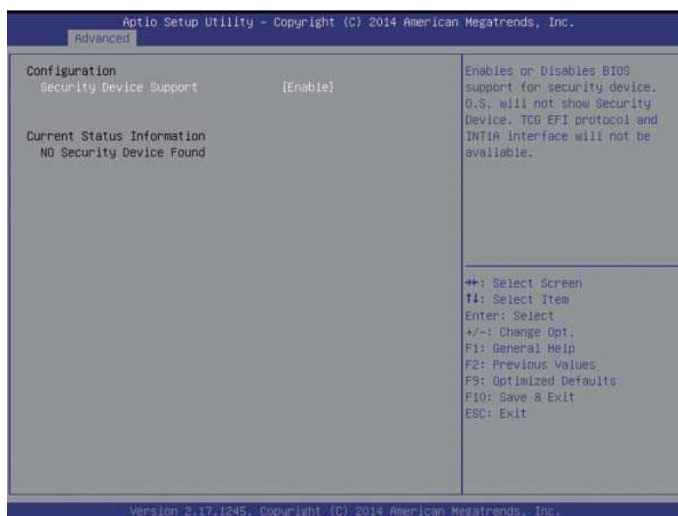

Trusted Computing Menu Interface Instruction Table

Interface Parameters	Function Description
Security Device Support	BIOS's security device support settings
Current Status Information	Status information of the current security device


4 ACPI Settings

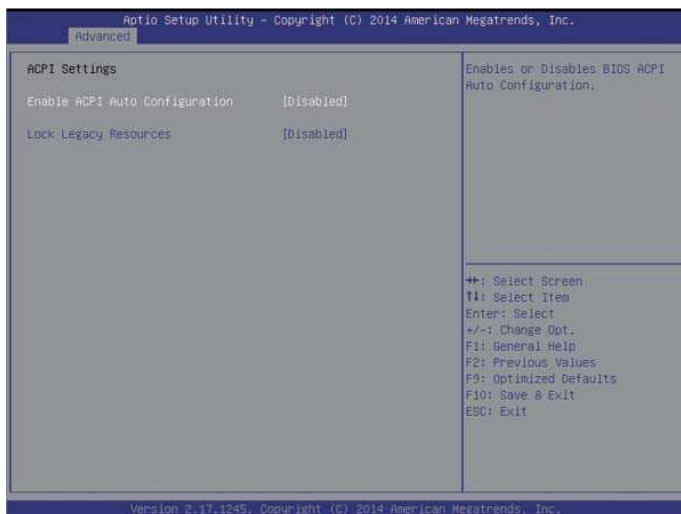

Advanced Menu Interface Instruction Table

Interface Parameters	Function Description
Enable ACPI Auto Configuration	To allow ACPI's automatic configuration.
Lock Legacy Resources setting	The locking legacy resources setting


5 AST2400 Super IO Configuration

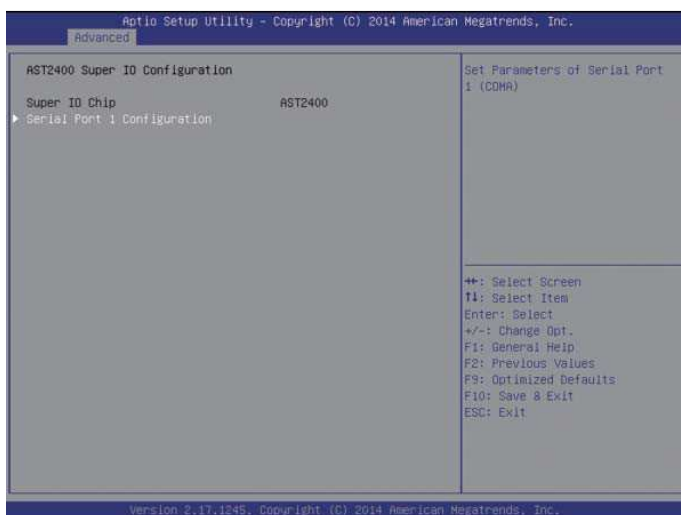

AST2400 Super IO Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Super IO Chip	The current I/O chip
Serial Port 1 Configuration	Serial port configuration

6 Serial Port Console Redirection

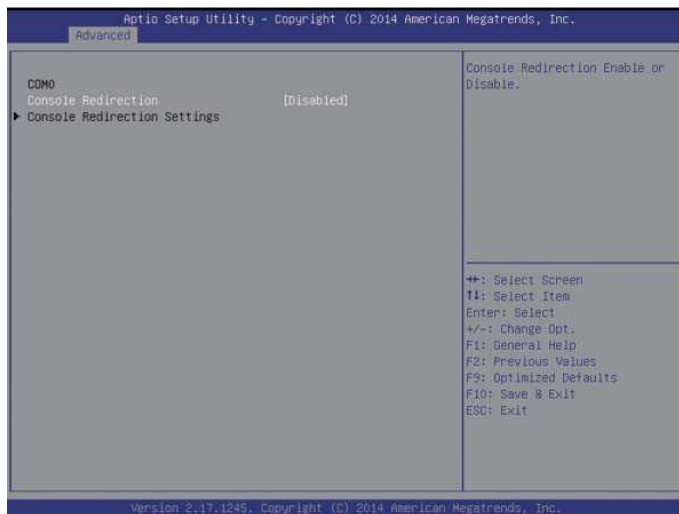

Serial Port Console Redirection Menu Interface Instruction Table

Interface Parameters	Function Description
Console Redirection	The console redirection switching
settings Console Redirection Settings	The console redirection parameter settings

3.2.2.4.1 Console Redirection Settings


When the Console Redirection option is set to [Enabled], the Console Redirection Settings menu is started.



Console Redirection Settings Menu Interface Introduction

Interface Parameters	Function Description
Terminal Type	Terminal type settings
Bits per second	Baud rate settings
Data Bits	Data bits settings
Parity	Parity check settings
Stop Bits	Stop bits settings
Flow Control	Flow control settings
VT-UTF8 Combo Key Support	VT-UTF8 Combo key support
settings Recorder Mode	Recorder mode settings
Redirection 100x31	Expanded terminal resolution settings
Legacy OS Redirection Resolution	Terminal resolution settings of legacy OS
Putty KeyPad	Putty's functional keys and keyboard
settings Redirection After BIOS POST settings	Redirection after BIOS bootup settings


7 PCI Subsystem Settings

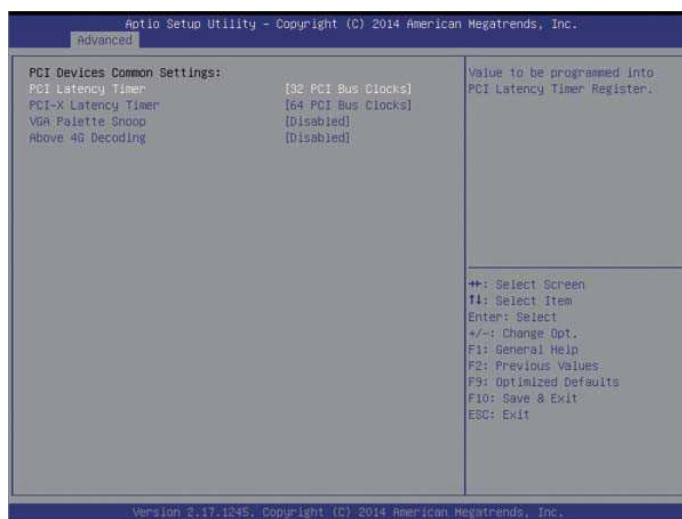

PCI Subsystem Settings Menu Interface Instruction Table

Interface Parameters	Function Description
PCI Latency Timer	PCI delay timer settings
PCI-X Latency Timer	PCI-X delay timer settings
VGA Palette Snoop	VGA color correction settings
Above 4G Decoding	64bit equipment's decoding settings on address space larger than 4G.

8 CSM Configuration

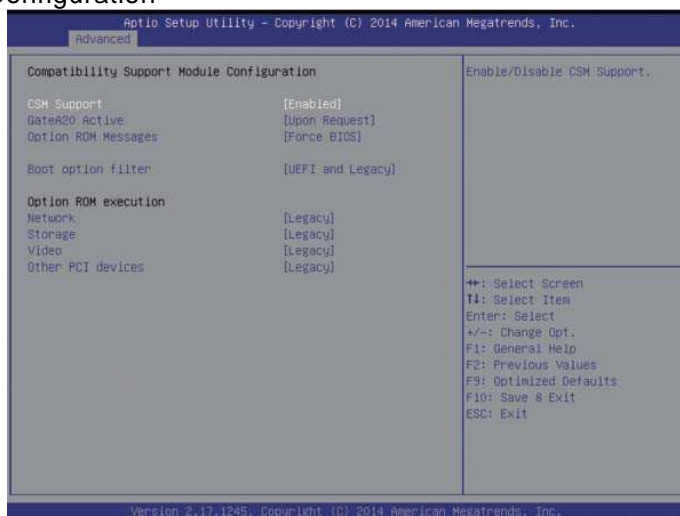

CSM Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
CSM Support	CSM support settings
GateA20 Active	A20 address line's control mode
settings Option Rom Message	Option Rom display mode settings
Boot option filter	Boot option filter settings
Option ROM execution	Option Rom execution
method	
Network	Network card Option Rom execution method settings
Storage	Storage device Option Rom execution method settings
Video	Video device Option Rom execution method settings
Other PCI devices	Other PCI devices Option Rom execution method
settings	

9 USB Configuration



USB Menu Interface Instruction Table

Interface Parameters	Function Description
Legacy USB Support	Legacy USB device settings
XHCI Hand-off	Expansible host controller interface settings, orienting to USB 3.0.
EHCI Hand-off	Enhanced host controller interface settings, orienting to USB2.0.
USB Mass Storage Driver Support	USB mass storage driver support
settings Port 60/64 Emulation	USB port 60/64h emulation settings


10 Onboard LAN Configuration



Onboard LAN Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Onbaord I350 NIC1 Control settings	Onboard network card NIC1 switching
Onbaord NIC2 Control settings	Onboard network card NIC2 switching
Onboard NIC1 ROM settings	Onboard network card NIC1 PXE Oprom switching
Onboard NIC2 ROM settings	Onboard network card NIC2 PXE Oprom switching

3.2.3 Chipset Menu

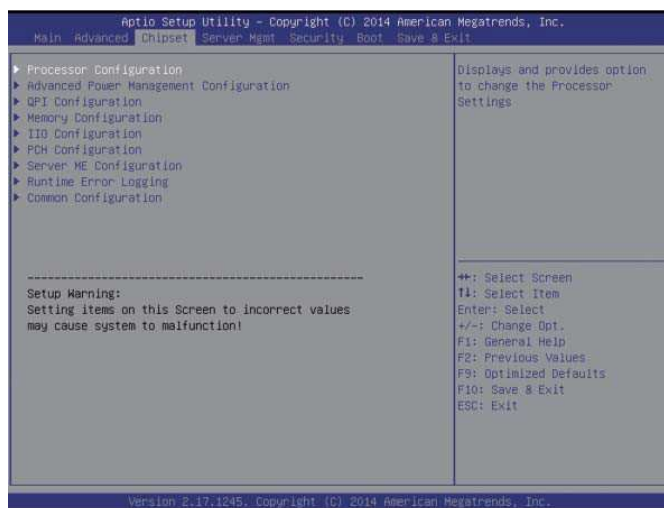

Chipset Menu Interface Instruction Table

Interface Parameters	Function Description
Processor Configuration	Processor configuration
Advanced Power Management Configuration	Advanced power management
configuration QPI Configuration	QPI configuration
Memory Configuration	Memory configuration
IIO Configuration	IIO configuration
PCH Configuration	PCH configuration
Server ME Configuration	Server ME configuration
Runtime Error Logging	Runtime error log configuration
Common Configuration	Common options configuration

11 Processor Configuration

Processor Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Processor Information detailed information.	Processor information sub-menu, and processor
Hyper Threading Technology settings	Hyper threading technology
Core Enabled	CPU core number settings
Execute Disable Bit	Virus protecting technology settings
Intel TXT Support settings	Intel trustable execution technology support
VMX settings	Intel hardware-assisted virtualization technology
SMX	Safe mode expansion
Hardware Prefetcher settings	Hardware prefetch settings
Adjacent Cache Prefetch settings	Adjacent high speed cache prefetch
DCU Streamer Prefetcher settings	DCU Streamer prefetch
DCU IP Prefetcher	DCU IP prefetch settings
Direct Cache Access (DCA)	Direct high speed cache access settings
AES-NI	Intel AES-NI advanced encryption standard settings


12 Advanced Power Management Configuration



Advanced Power Management Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Power Technology	To set power management
CPU P State Control	CPU P State control sets sub-menu, and starts when Power Technology is set to [Custom].
CPU C State Control when	CPU C State control sets sub-menu, and starts when Power Technology is set to [Custom].
Energy Performance Tuning	CPU performance and energy tuning sub-menu
Socket RAPL Configuration option	Turbo power limit settings sub-menu, and EIST requires to be set to [Enabled].
DRAM RAPL Configuration	DRAM RAPL configuration sub-menu


1) CPU P State Control

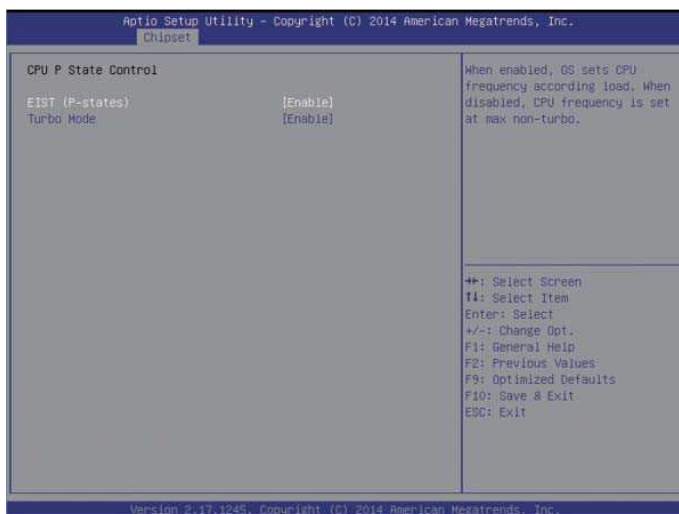

CPU P State Control Menu Interface Instruction Table

Interface Parameters	Function Description
EIST(P-states)	EIST switching settings
Turbo Mode	Turbo mode switching settings


2) CPU C State Control

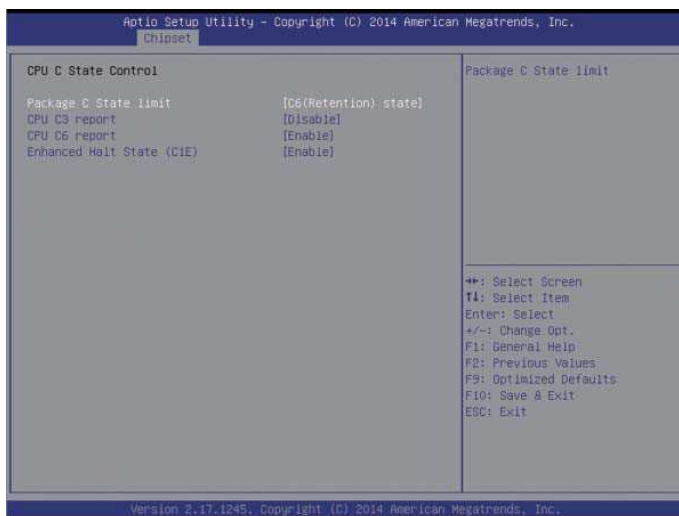

CPU C State Control Menu Interface Instruction Table

Interface Parameters	Function Description
Package C State limit	C state limit settings
CPU C3 report	C3 switching settings
CPU C6 report	C6 switching
settings Enhanced Halt State (C1E)	C1E switching


3) Energy Performance Tuning

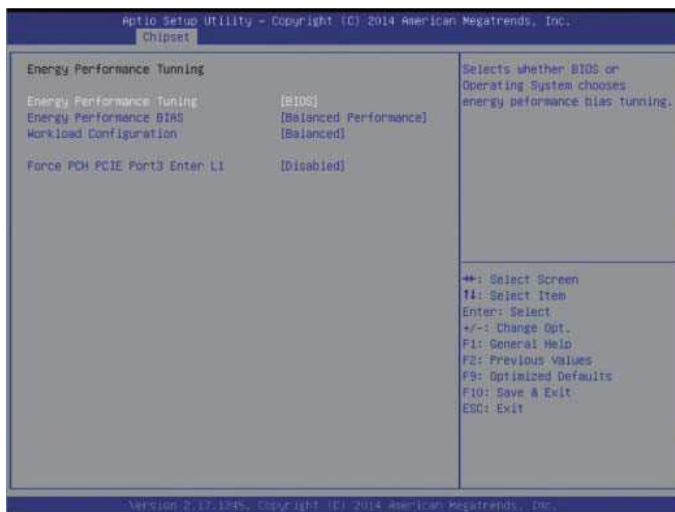

Energy Performance Tuning Menu Interface Instruction Table

Interface Parameters	Function Description
Energy Performance Tuning	To select BIOS or OS to carry out energy performance tuning
Energy Performance BIAS	Energy performance management settings
Workload Configuration	Workload configuration
Force	configuration Force


13 QPI Configuration

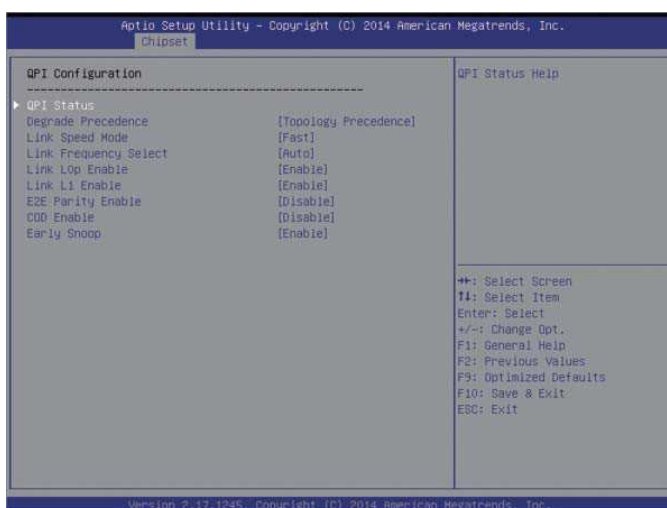

QPI Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
QPI Satus	QPI status display sub-
menu Degrade Precedence	To degrade to priority
settings. Link Speed Mode	Link speed mode settings
Link Frequency Select	Link frequency selection settings
Link L0p Enable	Link power saving mode settings, which is made when bandwidth is half of the peak bandwidth..
Link L1 Enable	In the case that system is extremely idle, turn off QPI
Link. E2E Parity Enable	E2E parity check enabling settings
COD Enable	COD enabling settings
Early Snoop	Early Snoop settings

14 Memory Configuration

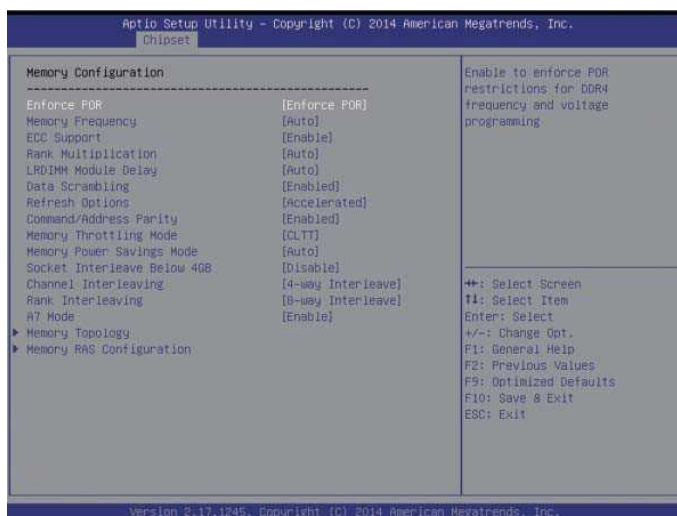

Memory Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Enforce POR	To execute POR settings
Memory Frequency	Memory frequency settings
ECC Support	ECC support settings
Rank Multiplication	Rank multiplication settings
LRDIMM Module Delay	LRDIMM module delay
settings Data Scrambling	Data scrambling settings
Refresh Options	Refresh mode settings

Memory Throttling Mode	Memory thermal throttling mode
settings Memory Power Savings Mode	Memory power saving mode settings
Socket Interleave Below 4GB	Processor Interleaving settings on address space below 4G. Channel Interleaving
Channel Interleaving	Channel interleaving settings
Rank Interleaving	Rank interleaving settings
A7 Mode	A7 mode settings
Memory Topology	Memory Topology
Memory RAS Configuration	Memory RAS configuration sub-menu

1) Memory RAS Configuration



Memory RAS Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Memory Mode	As for memory mode configuration, there're 3 options of [Independent], [Mirroring] and [Lock Step].
Lockstep X4 DIMMs	X4 DIMMs' Lockstep switching
settings Memory Rank Sparing	Memory Rank hot sparing settings
Correctable Error Threshold	Correctable error threshold settings
DRAM Maintenance	DRAM maintenance settings
Patrol Scrub	Patrol Scrub settings
Patrol Scrub Interval	Patrol Scrub interleaving settings
Demand Scrub	Demand Scrub settings
Device Tagging	Device tagging settings

15 IIO Configuration



IIO Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
IIO0 Configuration	IIO0 configuration sub-menu, used to set link speed of PCIE device of CPU0.
IIO1 Configuration	IIO1 configuration sub-menu, used to set link speed of PCIE device of CPU1.
I/OAT Configuration	Intel I/O acceleration technology configuration sub-menu. Intel VT for Directed I/O (VT-d)
	Intel VT-d switching settings

16 PCH Configuration




PCH Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Chassis Intrusion	Chassis intrusion switching settings
Restore AC Power Loss settings	AC power-on power status
PCH sSATA Configuration menu	PCH sSATA configuration sub-menu
PCH SATA Configuration menu	PCH SATA configuration sub-menu
USB Configuration	USB configuration sub-menu

1) PCH SATA Configuration

Taking PCH SATA Configuration menu as an example, introduce onboard SATA port, and SATA hard disk configuration, while PCH Ssata Configuration is similar to this, which will not be repeated here.

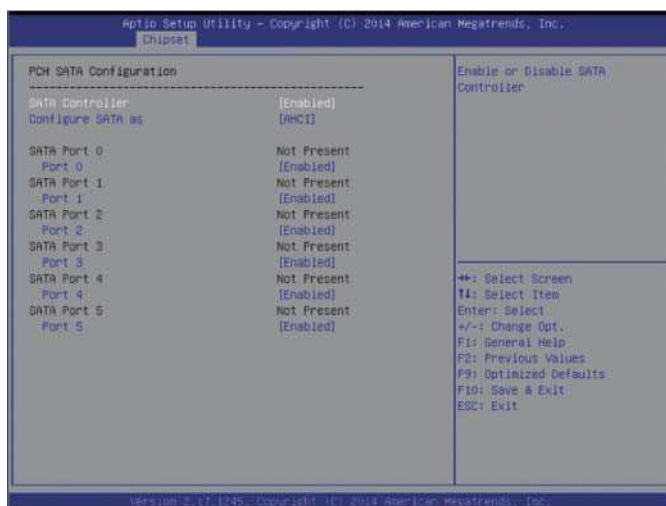

PCH SATA Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
SATA Controller	SATA controller switching settings
Configure SATA as	As for SATA mode configuration, there're two modes of [AHCI] and [RAID] for setting.
SATA Port 0/1/2/3/4/5	Information of hard disks connected to onboard SATA port 0/1/2/3/4/5.

SATA RAID mode configuration.

a、Configure SATA as an option set to [RAID], press F10 to save settings, and system restarts.

b、During system startup, the following content will display on the screen:

Press<CTRL-I> to enter Configuration Utility...

Meanwhile, press [Ctrl] and [I] synchronously to enter SATA RAID configuration interface, and one example is as shown in the following figure.

```
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.

RAID Volumes:
None defined.

Physical Devices:
ID Device Model Serial # Size Type/Status(Vol ID)
0 SAMSUNG M27PD480 S15TNYACB000082 447.1GB Non-RAID Disk
1 SAMSUNG M27PD480 S15TNYACB000083 447.1GB Non-RAID Disk
Press <CTRL-I> to enter Configuration Utility...
```

c、After entering SATA RAID configuration interface, menu list information, information of hard disk connecting to SATA controller (hard disk ID number, hard disk type, hard disk capacity as well as whether hard disk is a volume member etc.), existed RAID volume information (including volume ID number, name, RAID level, capacity, status, whether information bootable) will all display.

```
Intel(R) Rapid Storage Technology enterprise - SATA Option ROM - 4.0.0.1016
Copyright(C) 2003-14 Intel Corporation. All Rights Reserved.

[ MAIN MENU ]
1. Create RAID Volume
2. Delete RAID Volume
3. Reset Disks to Non-RAID
4. Exit

[ DISK/VOLUME INFORMATION ]

RAID Volumes:
None defined.

Physical Devices:
ID Device Model Serial # Size Type/Status(Vol ID)
0 SAMSUNG M27PD480 S15TNYACB000082 447.1GB Non-RAID Disk
1 SAMSUNG M27PD480 S15TNYACB000083 447.1GB Non-RAID Disk

[ F1 ]-Select [ ESC ]-Exit [ ENTER ]-Select Menu
```

Press Key	Description
↑↓	Used to move cursor in different menus or to change values of menu options.
TAB	To select the next menu setting option.
Enter	To select a menu.
Esc	To exit menu or return to previous menu from sub-menu.

d、SATA RAID configuration interface has the following 4 executable menus:

Create RAID Volume	To create an RAID volume.
Delete RAID Volume	To delete an existed RAID volume.
Reset Disks to Non-RAID to	To reset hard disks in RAID volume, and to restore them to non-RAID status.
Exit	To exit SATA Host RAID configuration interface.

a) Create RAID Volume Menu

After entering SATA RAID configuration interface, you could use up and down arrows to select this menu, then press [Enter] to create an RAID volume menu, or directly enter the number before the menu to create an RAID volume menu, for other menu operations are similar, so it will not be repeated here. A Create RAID Volume instance is as shown in the following figure:



System displays the following menu options:

Name	Please enter a volume label name less than 16 characters without containing any special character.
RAID Level	Please select RAID volume level, if no volume has been created at present, there're four volume levels of RAID0(Stripe), RAID1(Mirror), RAID10(RAID0+1) and RAID5(Parity)for selection, please select volume level according to actual requirements. RAID0: This RAID volume is allowed to be made on 2 or above hard disks. RAID1: This RAID volume is allowed to be made on 2 hard disks. RAID10: This RAID volume is allowed to be made on 4 hard disks, which is only available when hard disk quantity is 4 or above. RAID5 (Parity): This RAID volume is allowed to be made on 3 or above hard disks.
Disks	Select hard disks to make RAID volume, press enter after this option is selected, system will enter hard disk selection interface, please select hard disks to make RAID volume using space key accordingly, and then press enter to return to volume create menu.

Strip Size Please select strip size, only RAID0 and RAID5 volumes could select this option. Capacity Set volume capacity, and the default value is the max. volume capacity.

After completing the above configuration, please select [Create Volume], and press enter, system prompts: "WARNING:ALL DATA ON THE SELECTED DISKS WILL BE LOST. Are you sure you want to create this volume?(Y/N):".

To create an RAID volume, please enter "Y", a volume will be created, and all data on the selected disk will be lost.

Otherwise, please enter "N", to exit volume creation.

Here we enter "Y" to create an RAID volume, after creation completed, return to SATA Host RAID configuration main interface, and the created RAID volume will display in RAID volume.


b) Delete RAID Volume Menu



After entering Delete RAID Volume menu, system prompts: “Deleting a volume will reset the disks to non-RAID. Warning:ALL DISKS DATA WILL BE DELETED.”.


To delete an RAID volume, please press [DEL], system prompts: “ALL DATA IN THE VOLUME WILL BE LOST!” again. Are you sure you want to delete “Volume*”? (Y/N):”, to delete this RAID volume, please enter “Y”, to cancel deletion of this RAID volume, please enter “N”.

c) Reset Disks to Non-RAID Menu

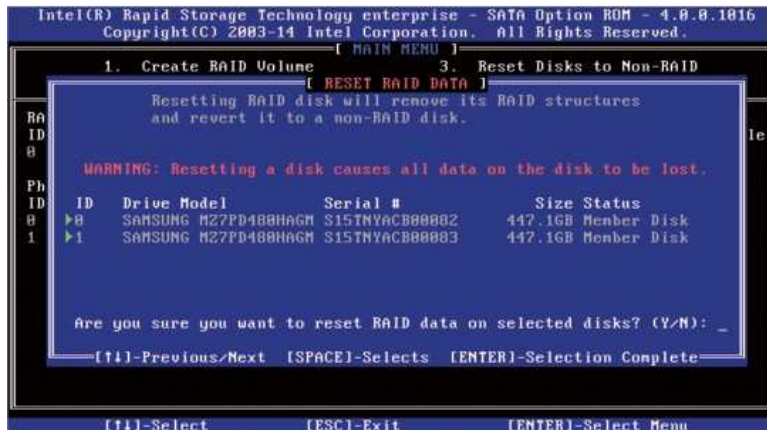


After entering Reset Disks to Non-RAID menu, system will display all hard disks in RAID volume, please select the hard disk to reset using the space key according to actual demand, and then press enter to reset the hard disk, system prompts “Are you sure you want to reset RAID data on selected disks? (Y/N)” again, enter “Y” or “N” according to prompt. It is to be noted that, during resetting hard disk, data on this disk will all be lost, meanwhile, this disk will not belong to RAID volume any more.

d) Exit Menu

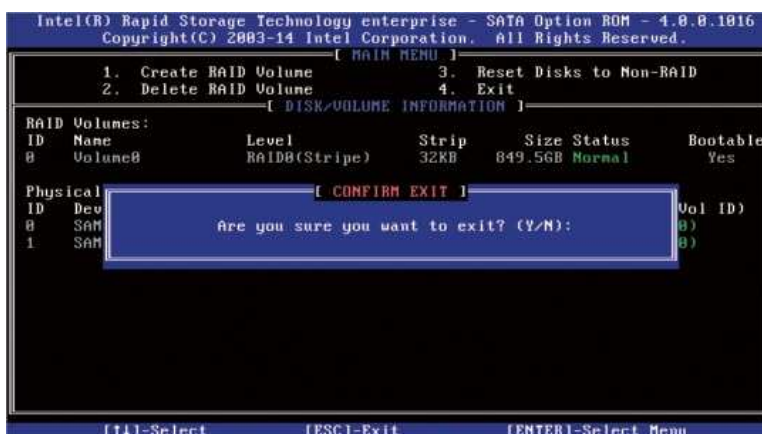

System prompts:”Are you sure you want to exit?(Y/N):”, enter “Y”, to exit SAS RAID configuration interface, enter “N”, to cancel exit operation.

17 Server ME Configuration

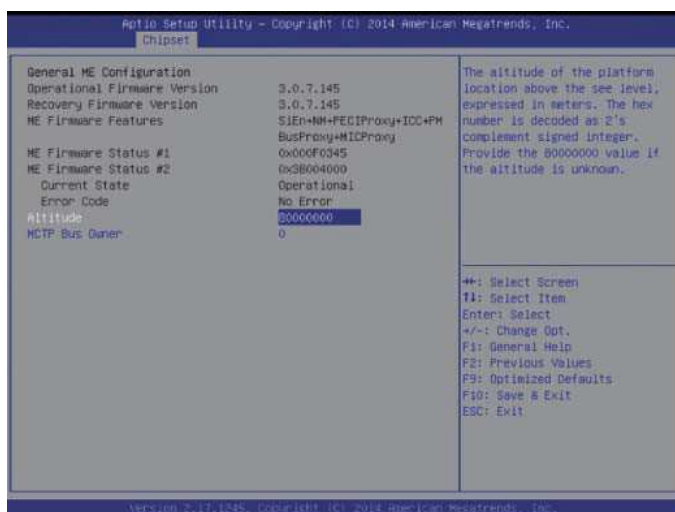

Server ME Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Operational Firmware Version	Operational ME firmware
version Recovery Firmware Version	Recovery ME firmware
version ME Firmware Features	ME firmware features
ME Firmware Status #1	ME FW status value #1
ME Firmware Status #2	ME FW status value #2
Current State	Current state
Error code	ME FW error code


18 Common Configuration



Common Configuration Menu Interface Instruction Table

Interface Parameters	Function Description
MMCFG Base	MMCFG base address
settings	
Isoc Mode	Isoc mode settings
MeSeg Mode	MeSeg mode settings
Numa	Numa switching settings
BIOS Guard	BIOS guarding settings
VGA Priority settings.	Integrated video card and external video card priority


3.2.4 Server Mgmt

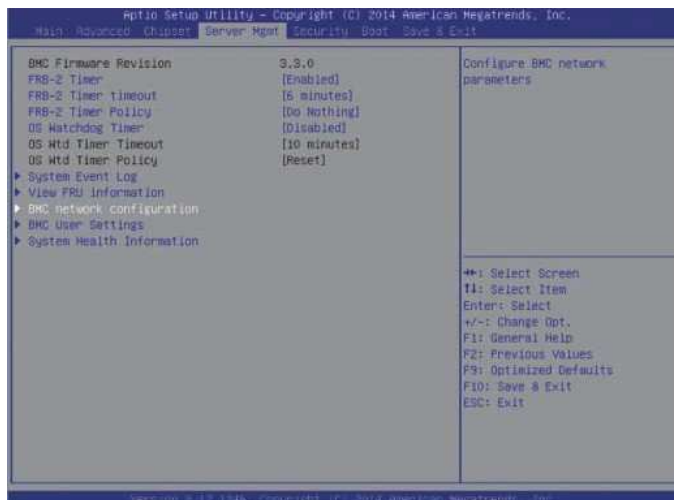

Server Mgmt Menu Interface Instruction Table

Interface Parameters	Function Description
BMC Firmware Version	BMC firmware version
FRB-2 Timer	FRB-2 clock settings
FRB-2 Timer timeout	FRB-2 clock expiration time settings
FRB-2 Timer policy	Policy settings after FRB-2 clock expiration
OS Watchdog Timer	System watchdog clock settings
OS Wtd Timer timeout	OS watchdog clock expiration time settings
OS Wtd Timer policy	Policy settings after OS watchdog clock expiration
BMC network configuration	BMC network settings
System Event Log	System event log sub-menu
View FRU information	To view FRU information sub-menu.
BMC network configuration	BMC network configuration sub-menu
BMC User Settings	BMC user settings sub-menu
SystemHealth Information	System health information sub-menu


19 System Event Log

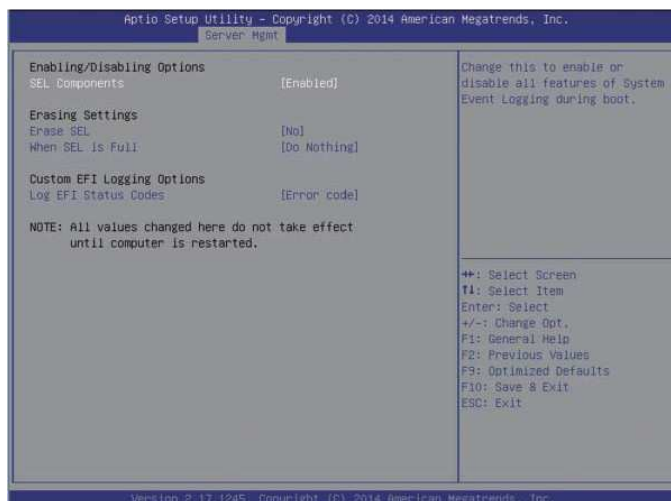

System Event log Menu Interface Instruction Table


Interface Parameters	Function Description
SEL Components	System event log switching settings during startup
Erase SEL	System event log erasing settings
When SEL is Full	Operation settings after system event log is full.
Log EFI Staus Codes	Logging EFI status codes settings

20 View FRU Information

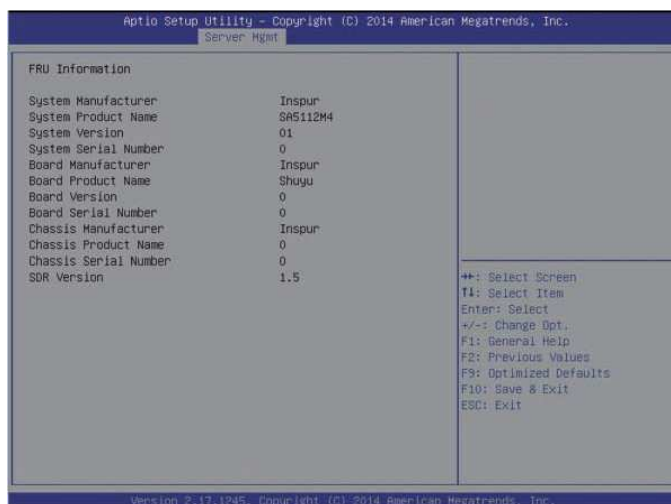

The View FRU Information menu lists BMC FRU information read by BIOS, and BIOS will interact with BMC at each system restart, keeping synchronous update of FRU information.

21 BMC network configuration

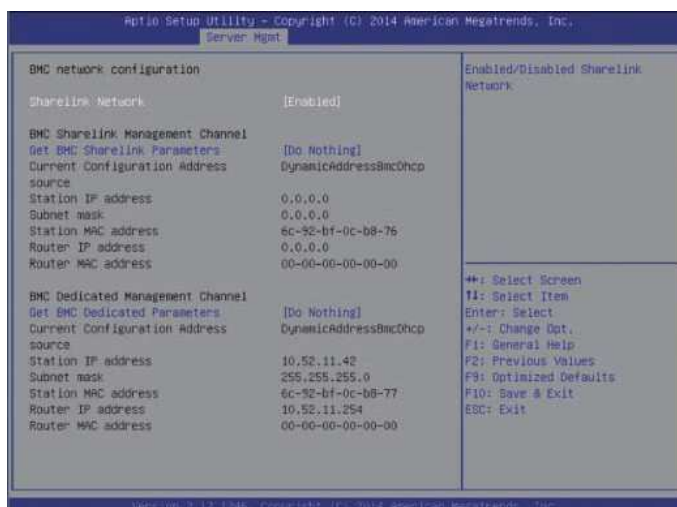

BMC network configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Configuration Address Source	Configuration BMC Network Status Parameter: It could set static IPs, and obtain IPs dynamically, while [Unspecified] will not modify BMC network parameters.
Current Configuration Address	Current configuration address
status Station IP address	Port IP address
Subnet mask	Subnet mask
Station MAC address	Port MAC address
Router IP address	Router IP address
Router MAC address	Router MAC address

BMC network configuration on BIOS setup interface, is to configure BMC management network via BIOS.

1) If no operation is carried out in BIOS, by default, it will read BMC, and configure its

Dedicated management port and shareline management port, taking Dedicated management port as an example, the BIOS reading configuration is as shown in the following figure:

```

BMC Dedicated Management Channel
Get BMC Dedicated Parameters      [Do Nothing]
Current Configuration Address     DynamicAddressBmcDhcp
source
Station IP address                10.52.11.42
Subnet mask                       255.255.255.0
Station MAC address              6c-92-bf-0c-b8-77
Router IP address                10.52.11.254
Router MAC address               00-00-00-00-00-00

```

2) BIOS could carry out Dynamic and Static network settings on BMC Dedicated management port and sharelink management port, taking Dedicated management port as an example, to set a BMC Static IP as follows:

- a、 Set the ConfigurationAddress Source option to [Static]
- b、 Set the ConfigurationAddress Source option to [Static]
- c、 Select the Station IP Address option, and press Enter, to pop up the Station IP

Address window, enter the Static IP to set manually, after configuration is completed, press Enter to confirm, and an example is as shown in the following figure:

```

BMC Dedicated Management Channel
Configuration Address source
Station IP address                10.53.11.30_
Subnet mask
Station MAC address              6
Router IP address                0.0.0.0
Router MAC address               00-00-00-00-00-00

```

c、 Select the Subnet Mask option, and press Enter, to pop up the Subnet Mask box, enter the Subnet Mask to set manually, after configuration is completed, press Enter to confirm, and an example is as shown in the following figure:

```

BMC Dedicated Management Channel
Configuration Address source
Station IP address
Subnet mask                       255.255.255.0_
Station MAC address              6c
Router IP address                0.0.0.0
Router MAC address               00-00-00-00-00-00

```

d、 Select the Router IP Address option, and press Enter, to pop up the Router IP Address box, enter the Router IP Address to set manually, after configuration is completed, press Enter to confirm, and an example is as shown in the following figure:

```

BMC Dedicated Management Channel
Configuration Address source
Station IP address
Subnet mask
Station MAC address
Router IP address
Router MAC address
  
```

Router IP address
 10.53.11.254_

```


        6
0.0.0.0
00-00-00-00-00-00
  
```

e、 When Static IP configuration is done, press F10 to save and restart, BIOS will carry out Static IP configuration for BMC.

```

BMC Dedicated Management Channel
Configuration Address source      [Static]
Station IP address               10.53.11.30
Subnet mask                      255.255.255.0
Station MAC address              6c-92-bf-07-1b-1f
Router IP address                10.53.11.254
Router MAC address               00-00-00-00-00-00
  
```

22 BMC User Settings

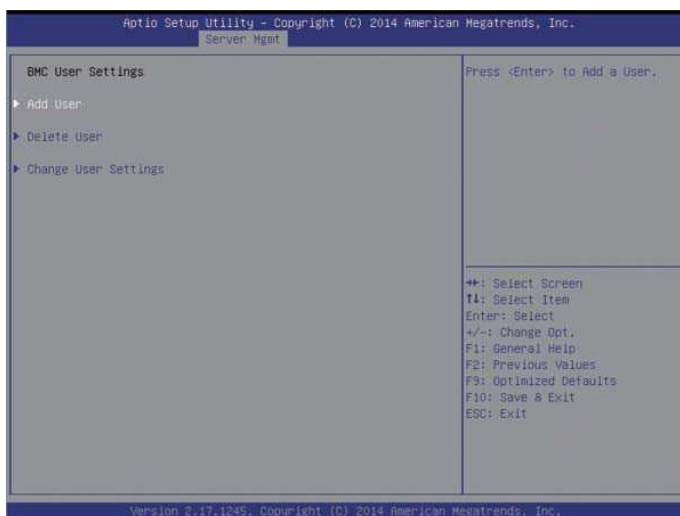


BMC User Settings Menu Interface Instruction Table

Interface Parameters	Function Description
Add User	The sub-menu for adding users.
Delete User	The sub-menu for deleting users.
Change User Settings	The sub-menu for changing user settings.

1) Add User operation



- a、 Select the User Name option, and press Enter to pop up the User Name box, enter the user name to set manually, after configuration is completed, press Enter to confirm.
- b、 Select the User Password option, and press Enter to pop up the User Password box, enter the user password to set manually, after configuration is completed, press Enter to confirm.
- c、 Channel NO is set to 1 or 8.
- d、 The User Privilege Limit option, sets privilege for new user, after configuration is completed, press Enter, to pop up the BMC USER SETTINGS INFO box, when system prompts “Set User Access Command Passed”, press Enter and then OK to confirm, the new user is added successfully.

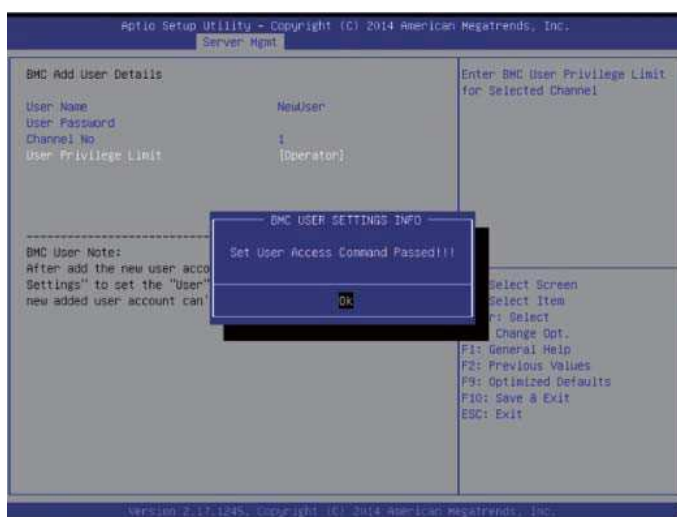


2) Delete User operation



a、 Select the User Name option, and press Enter to pop up the User Name box, manually enter the user name to delete, after configuration is completed, press Enter to confirm.


b、 Select the User Password option, and press Enter to pop up the User Password box, manually enter the user password to delete, after that, press Enter to confirm, and the BMC USER SETTINGS INFO prompt will pop up, indicating user password deletion is done or not.

3) Change User Settings

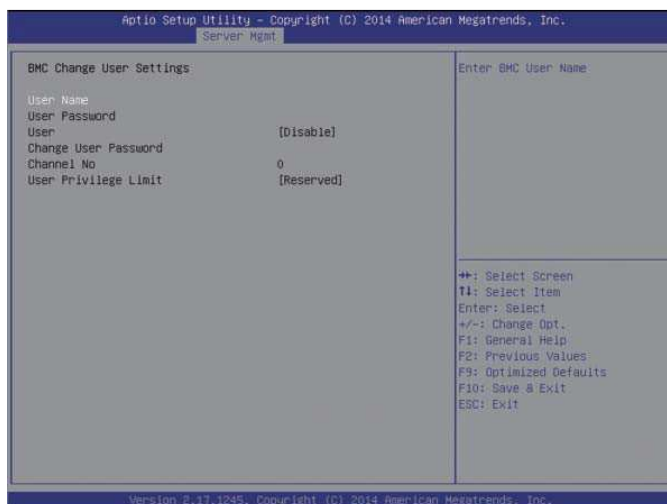

- a、 Select the User Name option, and press Enter to pop up the User Name box, manually enter the user name to modify, after configuration is completed, press Enter to confirm.
- b、 Select the User Password option, and press Enter to pop up the User Password box, manually enter the user password, and press Enter to confirm.
- c、 Select the User option, and set to [Enable] or [Disable].
- d、 Select the Change User Password option, to change user password.
- e、 Channel No. is set to 1 or 8.
- f、 The User Privilege Limit option, could change user’s privilege, after configuration is completed, press Enter, to pop up the BMC USER SETTINGS INFO prompt, when system prompts “Set User Access Command Passed”, press Enter and then OK to confirm, the user settings information is changed successfully.

23 **System Health Information**

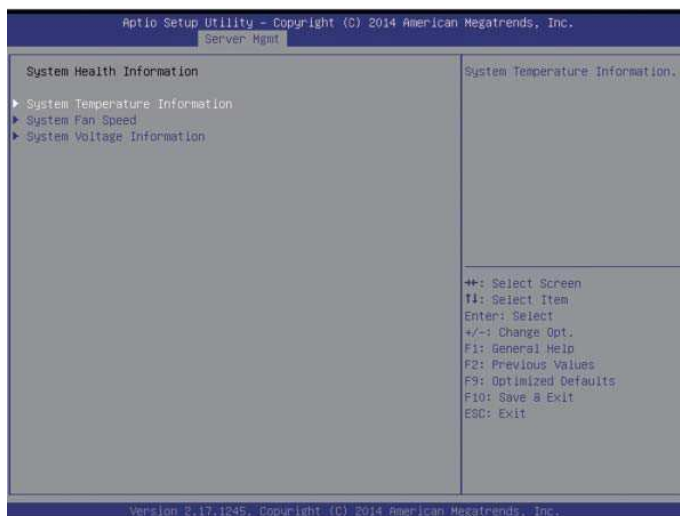

System Health Information Menu Interface Instruction Table

Interface Parameters	Function Description
System Temperature Information	System temperature information sub-menu
System Fan Speed	System fan speed sub-menu
System Voltage Information	System voltage information sub-menu

```

Aptio Setup Utility - Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt

BIOS Get System Temperature Status: Success

CPU0_Temp      49 °C
CPU1_Temp      42 °C
PCH_Temp       44 °C
DIMM0_Temp     38 °C
DIMM1_Temp     39 °C
Outlet_Temp    41 °C
Inlet_Temp     29 °C

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Version 2.17.1245, Copyright (C) 2014 American Megatrends, Inc.

```

2) System Fan Speed

```

Aptio Setup Utility - Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt

BIOS Get System Fan Speed Status: Success

FAN_0_Front    8928 RPM
FAN_0_Rear     8064 RPM
FAN_1_Front    8928 RPM
FAN_1_Rear     8064 RPM
FAN_2_Front    9024 RPM
FAN_2_Rear     8064 RPM
FAN_3_Front    N/A
FAN_3_Rear     N/A
FAN_4_Front    8448 RPM
FAN_4_Rear     7680 RPM
FAN_5_Front    8736 RPM
FAN_5_Rear     7488 RPM
FAN_6_Front    8640 RPM
FAN_6_Rear     7392 RPM
FAN_7_Front    N/A
FAN_7_Rear     N/A

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Version 2.17.1245, Copyright (C) 2014 American Megatrends, Inc.

```

3) System Voltage Information

```

Aptio Setup Utility - Copyright (C) 2014 American Megatrends, Inc.
Server Mgmt

BIOS Get System Voltage Status: Success


SYS_VCCIO      1.02 V
PCH_P1V05     1.03 V
PCH_P1V5      1.51 V
SYS_12V       11.938 V
SYS_3.3V      3.3075 V
CPU0_VCORE    1.75 V
CPU1_VCORE    1.75 V
SYS_5V        5.076 V
CPU0_DDR_VDDQAR 1.17 V
CPU0_DDR_VDDQCD 1.19 V
CPU1_DDR_VDDQEF 1.19 V
CPU1_DDR_VDDQGH 1.18 V
Total_Power    350 Watts

++: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F9: Optimized Defaults
F10: Save & Exit
ESC: Exit

Version 2.17.1245, Copyright (C) 2014 American Megatrends, Inc.

```


3.2.5 Security Menu

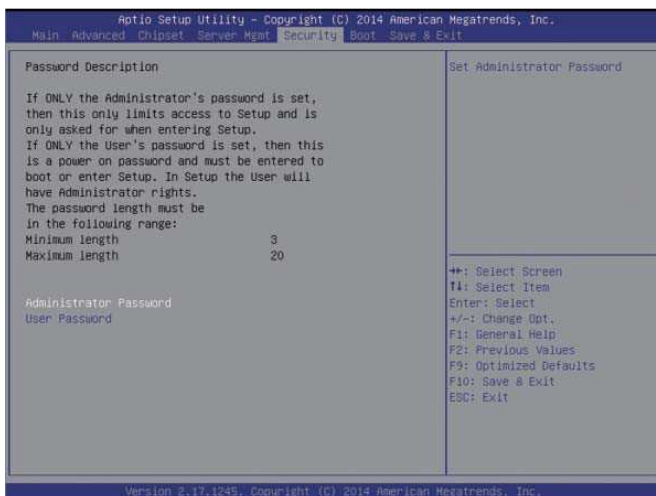

Security Menu Interface Instruction Table

Interface Parameters	Function Description
Administrator Password	Create a password for administrator.
User Password	Create a password for normal user.

3.2.6 Boot Menu

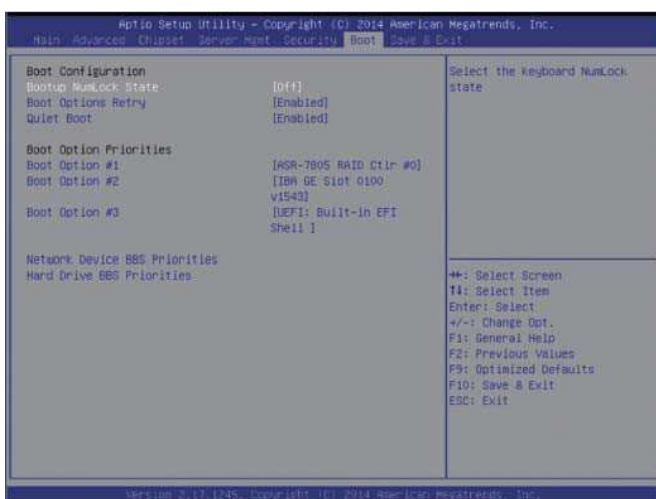


Boot configuration Menu Interface Instruction Table

Interface Parameters	Function Description
Bootup NumLock State	Numlock keys status settings after
bootup. Boot Options Retry	The booting device polling settings
Quiet Boot	To boot quietly, set this option to Enabled, and boot logo displays as that set by manufacturer, disabled, boot logo displays as AMI's default logo.
Boot Option Priorities	Boot option priority settings
Boot Option #X	Hard disk device BBS priority
Hard Driver BBS Priorities	Network device BBS priority settings
settings Network Device BBS Priorities	Network device BBS priority settings

To set BIOS boot operation:

Enter Boot menu, move the cursor to Boot option #X via up and down arrows to select, and set system boot sequence, with X set to 1, 2, 3 etc., while an example is as shown in the following figure:

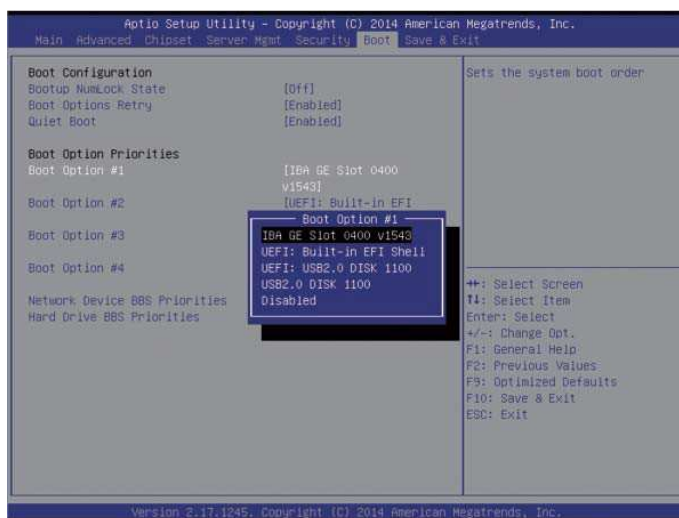

Taking Boot option #1 as an example, you could set the first boot device for the system: Move the cursor to Boot option #1, and press Enter, to pop up the boot option for selection:

i.e. IBA GE slot 0400 v1543, UEFI: Built-in EFI Shell, UEFI:USB2.O DISK 1100, USB2.O DISK 1100 etc., select one via up and down keys, i.e. USB2.O DISK 1100, and press Enter, to select USB DOS disk as the first boot device for the system.

3.2.7 Save & Exit Menu



Save & Exit Menu Menu Interface Instruction Table

Interface Parameters	Function Description
Save Changes and Exit	To Save and exit
Discard Changes and Exit	To abandon changes and
exit. Save Changes and Reset	To save changes and reboot
Discard Changes and Reset	To abandon changes and
reboot Save Changes	To save changes.
Discard Changes	To abandon changes.
Restore Defaults	To restore factory settings.
Save as user Defaults	To save as defaults.
Restore user Defaults	To restore user defaults.
Boot Override	To reload boot device, you could select all boot devices in the following.

3.3 Firmware Update

For BIOS update, you could select to update in DOS or OS.

1) Use afudos tool to update BIOS in DOS

System boots from USB DOS startup disk, enters the directory containing afudos tool, while bin files of the corresponding new BIOS version have been put into this folder, execute command: afudos BIOS.bin /b /p /n /x /me to update BIOS and ME, for BIOS.bin – bin files of the new BIOS version, an example is as shown in the following figure:

```
C:\AFUDOS>afudos BIOS.bin /b /p /n /x /me
-----
          AMI Firmware Update Utility  v5.06.00
          Copyright (C)2014 American Megatrends Inc. All Rights Reserved.
-----
Reading flash ..... done
- ME Data Size checking . ok
Secure Flash enabled, recalculate ROM size with signature...
- FFS checksums ..... ok
Loading capsule to secure memory buffer ... done
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
Erasing Main Block ..... done
Updating Main Block ..... done
Verifying Main Block ..... done
Erasing NVRAM Block ..... done
Updating NVRAM Block ..... done
Verifying NVRAM Block ..... done
- Update success for /FDT!!
- Successful Update Recovery Loader to OPRx!!
- Successful Update FPT, MFSB, FTR and MFS!!
- ME Entire Image update success !!
WARNING : System must power-off to have the changes take effect!
```

When there's no change in ME part, to update BIOS part, it is only required to execute command: `afudos BIOS.bin /b /p /n /x`.

- Parameter instructions:
- `/b` -- Program Boot Block
 - `/p` -- Program Main BIOS
 - `/n` -- Program NVRAM
 - `/x` -- Don't Check ROM ID
 - `/me` -- Program ME Entire Firmware Block

2) Use afudos tool to update BIOS in Linux OS

There're 32bit and 64bit Linux OS `afulnx` tools, taking Linux 64bit OS as an example, use `afulnx_64` tool, to enter the directory containing `afulnx_64` tool, meanwhile, put bin files of corresponding BIOS into this folder, and enter command: `/afulnx_64 BIOS.BIN /P /B /N /X /R`, while an example is as shown in the following figure:

```
root@localhost afulnx64# ./afulnx_64 BIOS.bin /b /p /n /x
-----
          AMI Firmware Update Utility  v5.06.01
          Copyright (C)2014 American Megatrends Inc. All Rights Reserved.
-----
Reading flash ..... done
- ME Data Size checking . ok
Secure Flash enabled, recalculate ROM size with signature...
- FFS checksums ..... ok
Loading capsule to secure memory buffer ... done
Erasing Boot Block ..... done
Updating Boot Block ..... done
Verifying Boot Block ..... done
Erasing Main Block ..... done
Updating Main Block ..... done
Verifying Main Block ..... done
Erasing NVRAM Block ..... done
Updating NVRAM Block ..... done
Verifying NVRAM Block ..... done
```


When there's any change in ME part, to update BIOS part, it is required to execute command: `afudos BIOS.bin /b /p /n /x /me`, with parameter instructions identical to DOS.

3) Use afuWin tool to update BIOS in Windows OS

There're 32bit and 64bit Windows OS afuwin tools, and afuwinx64.exe is used in 64bit OS, run a command prompt, to enter the directory containing afuwinx64.exe tool, meanwhile, put bin files of corresponding BIOS into this folder, and enter command: afuwinx64.exe BIOS.BIN /P /B /N /X /R, to update BIOS files.

Meanwhile, GUI method is provided in Windows to refresh BIOS. Taking Windows 2008R2 OS as an example, use AFUWINGUI tool to update BIOS.


- a、 Run AUWINGUI.EXE tool, as shown in the following figure:

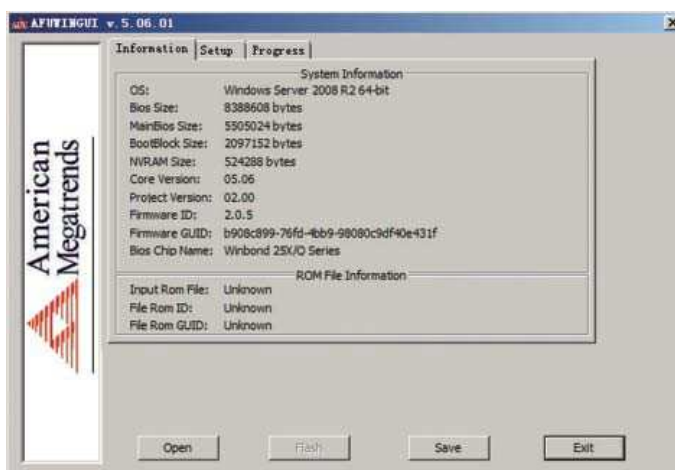

- b、 Click the Open button, after selecting the BIOS.bin file to update, system enters Setup interface automatically.



c、 Select Program all Blocks and Do Not Check ROM ID options on Setup interface, click flash button, system enters Progress interface automatically, and executes BIOS update accordingly according to colors shown on the right, thus BIOS update is done as shown in the following figure:

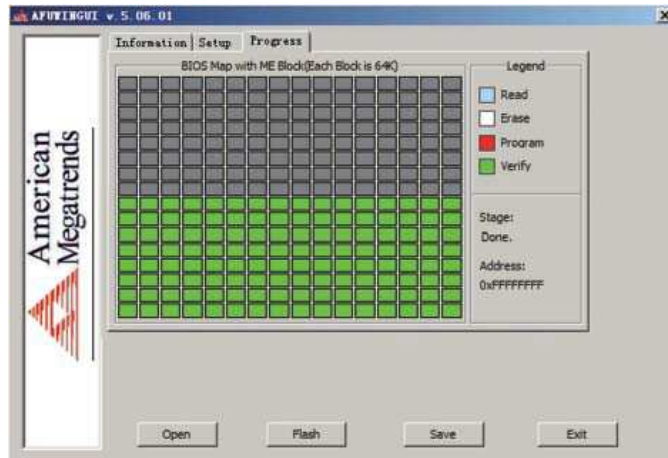

4 BMC Configuration

4.1 Introduction

This chapter introduces specifications and main functions to be abided by management software.

the distributor server management software is a control unit realizing server management, which is compatible with management standard of the server industry IPMI2.0 specification.

It mainly realizes the following functions:

- Remote control:

It realizes server control via functions such as KVM (Keyboard Video and Mouse), SOL (Serial Over Lan) and virtual media etc.



Note: SOL function has to be realized via third party tools such as IPMITool etc.

- Alarming management

Reports alarming information in a real-time way, and carries out corresponding solutions according to information.

- Status monitoring

Monitors various running states of all monitoring units in a real-time way.

- Device information management

Provides device version information, type and asset information.

- Heat radiation control

It could adjust fan rotation rate according to ambient temperature and workload dynamically.

- Supports IPMI Tool Management.

Supports operation according to commands sent by IPMI Tool, and you could download IPMI Tool by yourself.



Note: IPMI Tool downloading [website: http://ipmitool.sourceforge.net/manpage.html](http://ipmitool.sourceforge.net/manpage.html)

- Supports WEB interface management

Provides a friendly and visual interface management, and you could complete tasks of configuration and query via a click on the interface quickly.

- Supports account centralized management

Supports to store accounts in Active Directory server, and direct certification to server, so as to realize management system login with domain accounts.

4.2 Functional Modules

This chapter introduces the distributor server management system module composition as well as functions of these modules.

4.2.1 Module Composition

The distributor server management system is mainly composed of IPMI module, command line module, WEB module, KVMOver IP and virtual media etc.

- Command module realizes the calling of IPMI module. User realizes the operation on IPMI module via command lines.
- WEB module realizes daily management on server in the form of visual interface via calling IPMI commands, and WEB module has integrated functions of KVM and virtual media.

4.2.2 IPMI Module Introduction

IPMI module realizes management on server system according to IPMI2.0 standard. Functions realized by IPMI module include:

- System real-time monitoring

It could realize alarming report, alarming indication and self-protection of startup system, when there's any fault detected.

- System remote control

It could realize management requirements such as remote power-on/off, and business system reset etc. via command lines and Web.

4.2.3 Command Line Function Introduction

Command line module includes query and configuration commands for network, sensor, fan, user management, system and server etc.

4.2.4 Remote Control Module Introduction

Remote control module includes:

- KVM Over IP: It means a management method that user carries out monitoring and control on remote devices via using local video, keyboard and mouse at client, to operate remote devices in a real-time way.
- Virtual media: A method of providing remote access on local media (CD-Rom, floppy drive or CD/floppy disk iso file) in the form of virtual CD driver and floppy drive on server via internet.

Instructions:

If Java runtime environment does not comply with requirements, user could login <http://www.oracle.com/technetwork/java/javase/downloads/index.html> to download.

4.3 Web Interface Introduction

About this chapter

It introduces Web interface of management system as well as operation steps to login Web interface.

- Login Web interface.
Introduces methods to login Web interface.
- Web interface introduction Introduces Web interface layout.

4.3.1 Login Web Interface

It introduces methods to login Web interface.

This guide introduces operation steps to login Web management interface, taking Windows 7 operation system and Fire Fox browser as examples.




Note: When carrying out interface operation via Web, up to 20 users could login synchronously.

Step 1 Ensure management net ports on Client and server are connected to internet.

Step 2 Open the browser, and enter “http://ipaddress” in the address bar. (In which ip address is the IP address of management port, for specific determining method on IP address, please refer to the annex to determine IP address of management network port)


Step 3 The login interface pops up, as shown in the following figure, in this interface:
1. Enter user name and password.

 **Note:** System provides a default user “admin” in administer user group, and the default password is “admin”.


2. Click “Login”, to enter the management interface.

4.3.2 Web Interface Introduction

The Web interface helps users to accomplish server management via its visual and friendly interface, and the Web interface contains online help, so users could query

instructions and operation guide on this interface via clicking button  on any interface.

Web interface is divided into four parts, as shown in the following figure.

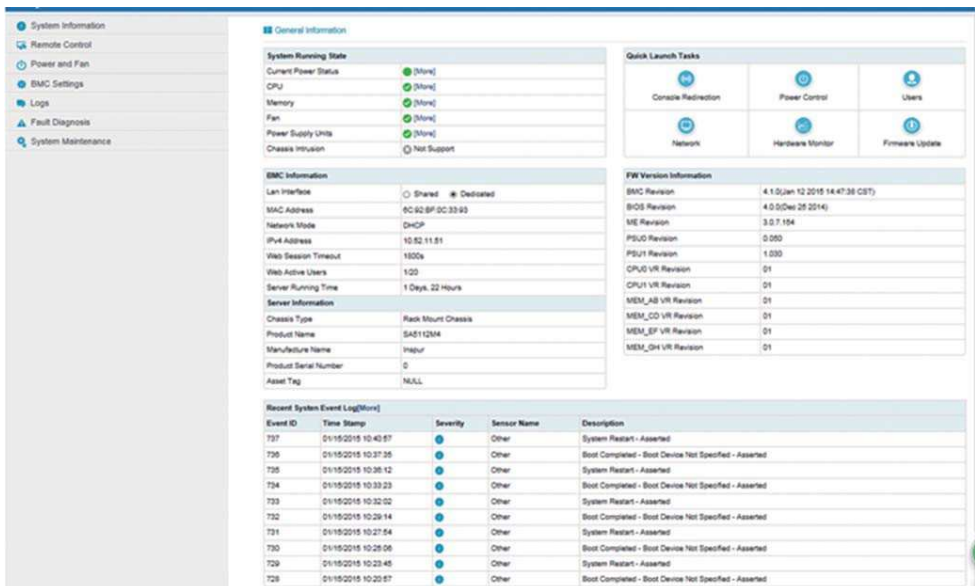





The screenshot displays the BMC web interface with the following sections:

- System Information:** A sidebar menu with options like System Information, Remote Control, Power and Fan, BMC Settings, Logs, Fault Diagnosis, and System Maintenance.
- General Information:**
 - System Running State:** Includes Current Power Status, CPU, Memory, Fan, Power Supply Units, and Chassis Intrusion.
 - BMC Information:** Includes LAN Interface, MAC Address, Network Mode, IPv4 Address, Web Session Timeout, Web Active Users, and Server Running Time.
 - Server Information:** Includes Chassis Type, Product Name, Manufacture Name, Product Serial Number, and Asset Tag.
 - Recent System Event Log:** A table listing events with columns for Event ID, Time Stamp, Severity, Sensor Name, and Description.
- Quick Launch Tasks:** A grid of buttons for Console Redirection, Power Control, Users, Network, Hardware Monitor, and Firmware Update.
- FW Version Information:** A table listing various firmware versions such as BMC, BIOS, iUE, P5UJ, CPU0, MEM_AB, MEM_SP, and MEM_OH.

- The name of Web interface is displayed on top left of the interface.

- Meanings of all buttons on top right of the interface:

 **General information** Click the System Abstract button, to return to the System Abstract page.  **Refresh** Click the Refresh button, to refresh the page.


 **Language** Click the Language button, to shift language, which supports Chinese and English.  **Help** Click the Help button to query help information on corresponding page.

 Click the Logout button, to return to login page.

- There's a navigation tree on the left, via nodes on the tree, you could select different functional interfaces. Functions able to be realized via Web interface include: Viewing the overall situation, viewing system information, remote control, power management, event and log query, real-time monitoring, diagnosis and orientation, system maintenance, and system configuration etc. For detailed introduction on all functions, please refer to the following chapters.
- Specific operation interface is on the right of the interface.

4.3.3 Overall Situation

Click System Abstract, to open the “System Abstract” interface, as shown in the following figure.

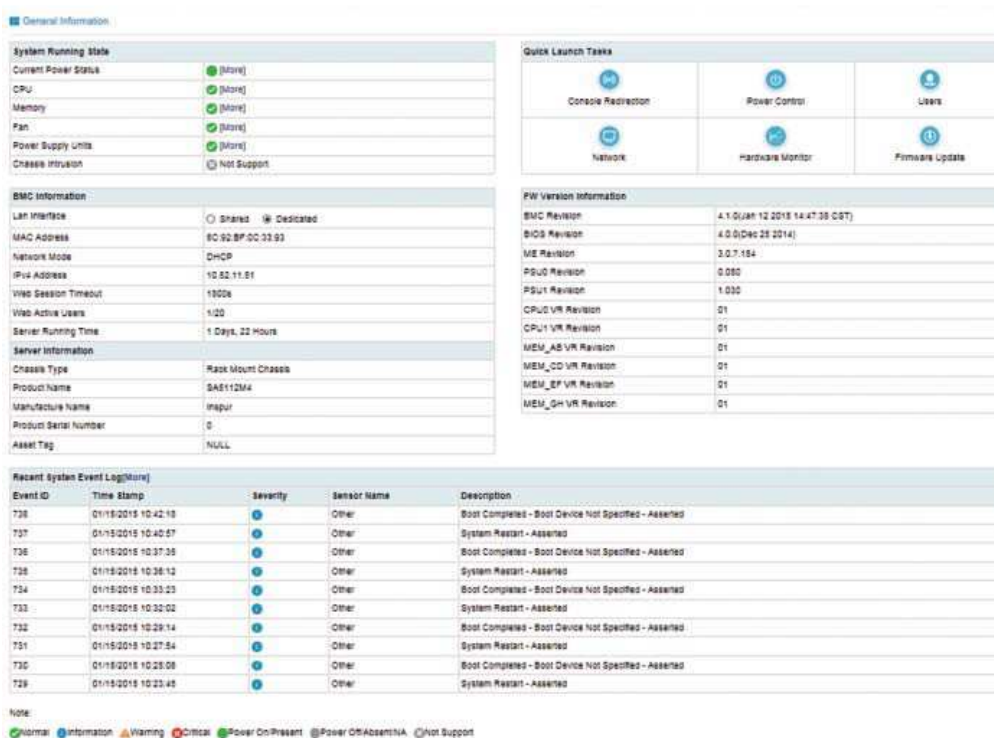

The screenshot displays the 'System Abstract' interface with the following sections:

- General Information:**
 - System Running State:**

Current Power Status	● [More]
CPU	● [More]
Memory	● [More]
Fan	● [More]
Power Supply Units	● [More]
Chassis Intrusion	● Not Support
 - BMC Information:**

Lan Interface	<input type="radio"/> Shared <input checked="" type="radio"/> Dedicated
MAC Address	8C:3D:BF:0C:33:93
Network Mode	DHCP
IPv4 Address	10.52.11.51
Web Session Timeout	1000s
Web Active Users	1/20
Server Running Time	1 Days, 32 Hours
 - Server Information:**

Chassis Type	Rack Mount Chassis
Product Name	SAE112M4
Manufacture Name	Inspur
Product Serial Number	0
Asset Tag	NULL
- Quick Launch Tasks:**
 - Console Redirection
 - Power Control
 - Users
 - Network
 - Hardware Monitor
 - Firmware Update
- FW Version Information:**

BMC Revision	4.1.0(Jan 12 2015 14:47:35 CST)
BIOS Revision	4.0.0(Dec 28 2014)
ME Revision	3.0.7.154
PSU0 Revision	0.080
PSU1 Revision	1.030
CPUC_V/R Revision	01
CPU1_V/R Revision	01
MEM_A0_V/R Revision	01
MEM_C0_V/R Revision	01
MEM_E0_V/R Revision	01
MEM_G0_V/R Revision	01
- Recent System Event Log:**

Event ID	Time Stamp	Severity	Sensor Name	Description
738	01/15/2015 10:42:18	Information	Other	Boot Completed - Boot Device Not Specified - Assented
737	01/15/2015 10:40:57	Information	Other	System Restart - Assented
736	01/15/2015 10:37:35	Information	Other	Boot Completed - Boot Device Not Specified - Assented
735	01/15/2015 10:36:12	Information	Other	System Restart - Assented
734	01/15/2015 10:33:03	Information	Other	Boot Completed - Boot Device Not Specified - Assented
733	01/15/2015 10:30:02	Information	Other	System Restart - Assented
732	01/15/2015 10:29:14	Information	Other	Boot Completed - Boot Device Not Specified - Assented
731	01/15/2015 10:27:54	Information	Other	System Restart - Assented
730	01/15/2015 10:25:08	Information	Other	Boot Completed - Boot Device Not Specified - Assented
729	01/15/2015 10:23:48	Information	Other	System Restart - Assented

4.3.4 System Information

Select “System Information” on navigation tree, which includes five interfaces of “Asset Information”, “Hardware Monitoring”, “Device Status”, “BIOS Option”, “FRU Information”, as shown in the following figure.

- Asset information: Displays system configuration information, which includes CPU, memory, PCIE device and Mac address information.

- Hardware monitoring: Displays real-time monitoring information, which includes temperature sensor, voltage sensor, fan rotation rate, power, processor status, memory status and power module status information.
- Device status: Displays status information of the front set hard disk.
- BIOS options: Displays the set state of BIOS options.
- FRU information: Displays FRU information;

Asset information

CPU Memory PCIe Front Hard Backplane Hard Disk Onboard NIC Power Supply Unit

Number of Present Devices: 2

No.	Present	Model	Used Core	Thermal Design Power(W)	L1 Cache(KB)	L2 Cache(KB)	L3 Cache(KB)
CPU_0		Intel(R) Xeon(R) CPU E5-2620 v3 @ 2.40GHz	6/6	85	384	1536	15360
CPU_1		Intel(R) Xeon(R) CPU E5-2620 v3 @ 2.40GHz	6/6	85	384	1536	15360

Note:
 Present Absent

Hardware Monitor

Temperature Voltage Processor Memory Drive Slot (Bay) Power Supply Power Unit Fan Event Logging disabled

Management Subsystem Health Microcontroller / Coprocessor Watchdog 2

Sensor	Status	Reading	Low NCT	Low CT	Low NRT	Up NCT	Up CT	Up NRT
CPU0_Temp		51°C	N/A	N/A	N/A	102°C	112°C	N/A
CPU1_Temp		41°C	N/A	N/A	N/A	102°C	112°C	N/A
PCH_Temp		38°C	N/A	N/A	N/A	100°C	110°C	N/A
DIMMG0_Temp		39°C	N/A	N/A	N/A	95°C	105°C	N/A
DIMMG1_Temp		33°C	N/A	N/A	N/A	95°C	105°C	N/A
RISER_0_Temp		N/A	N/A	N/A	N/A	N/A	N/A	N/A
RISER_1_Temp		36°C	N/A	N/A	N/A	N/A	N/A	N/A
Inlet_Temp		24°C	N/A	N/A	N/A	N/A	N/A	N/A
BMC_Temp		36°C	N/A	N/A	N/A	N/A	N/A	N/A
Outlet_Temp		32°C	N/A	N/A	N/A	N/A	N/A	N/A
82599_Temp		N/A	N/A	N/A	N/A	N/A	N/A	N/A
CPU0_INLET_Temp		31°C	N/A	N/A	N/A	N/A	N/A	N/A
CPU1_INLET_Temp		29°C	N/A	N/A	N/A	N/A	N/A	N/A
PSU_INLET_Temp		35°C	N/A	N/A	N/A	N/A	N/A	N/A
CPU0_OUTLET_Temp		35°C	N/A	N/A	N/A	N/A	N/A	N/A
CPU1_OUTLET_Temp		32°C	N/A	N/A	N/A	N/A	N/A	N/A
HDD0_REAR_Temp		N/A	N/A	N/A	N/A	60°C	70°C	N/A
HDD1_REAR_Temp		N/A	N/A	N/A	N/A	60°C	70°C	N/A

Note:
 Normal Warning Critical N/A

Hardware Monitor

Temperature Voltage Processor Memory Drive Slot (Bay) Power Supply Power Unit Fan Event Logging disabled

Management Subsystem Health Microcontroller / Coprocessor Watchdog 2

Sensor	Status	Reading	Low NCT	Low CT	Low NRT	Up NCT	Up CT	Up NRT
BMC_Boot_Up		0x8002	N/A	N/A	N/A	N/A	N/A	N/A

Note:
 Normal Warning Critical N/A

System Device Status

Front Hard Disk Onboard Network Card

No.	NIC Type	Mac Addr	Link Status
LAN_0	Intel(R) I350 Gigabit Network Connection	6c:92:bf:0c:33:8e	●
LAN_1	Intel(R) I350 Gigabit Network Connection	6c:92:bf:0c:33:8f	●
LAN_2	Intel(R) I350 Gigabit Network Connection	6c:92:bf:0c:33:90	●
LAN_3	Intel(R) I350 Gigabit Network Connection	6c:92:bf:0c:33:91	●

Note:
● Normal/Location/Rebuild ✖ Critical ● Present/Linkup ● Absent/Linkdown

BIOS Setup Options

Advanced Chipset Boot

Setup Option	Setup Option Value
COM0 Console Redirection	Disable
Above 4G Decoding	Disable

FRU Information

Basic Information Chassis Information Board Information Product Information

Attribute	Value
Product Information Area Format Version	1
Manufacturer Name	Inspur
Product Name	SA512M4
Product Part Number	0
Product Version	01
Product Serial Number	0
Asset Tag	NULL

4.4 Remote Control

Select “Remote Control” on navigation tree, to open the remote control interface, which contains six interfaces of “Console Redirection (KVM)”, server switch-on/off control, server orientation, remote session configuration, virtual media configuration and mouse mode configuration, as shown in the following figure.

- **Console redirection (KVM): To pop up the KVM console window.**
- Server switch-on/off control: To control startup, shutdown and restart of the server.
- Server orientation: To turn on/off the positioning light.
- Remote session configuration: To set KVM session encryption, media encryption and virtual media connection methods.
- Virtual media configuration: To set the quantity of virtual media (floppy disks, CD drives and hard disks etc.)
- Mouse mode configuration: To set the mouse working mode for KVM remote console.

Console Redirection

1. Click 'KVM Over IP' button and download the JNLP file
2. Open the JNLP file through JRE and login to the terminal

Control console redirection	KVM Over IP
-----------------------------	-------------

KVM Attributes

Maximum Sessions	5
Active Sessions	0

Server Power Control

Server Power Control	
Current Power Status	<input checked="" type="radio"/> ON <input type="radio"/> Power On <input checked="" type="radio"/> Power Off <input type="radio"/> Force Power Off <input type="radio"/> Warm Reset <input type="radio"/> Power Cycle
Control Options	

Perform Action

Server Location

Server Location	
System ID LED Status	<input type="radio"/> OFF
System ID LED Light Time	<input checked="" type="radio"/> All the time <input type="radio"/> 10s <input type="radio"/> 30s <input type="radio"/> 60s <input type="radio"/> Other <input type="text"/> s
System ID LED Operation	<input type="button" value="Turn On Led"/> <input type="button" value="Turn Off Led"/>

Configure Remote Session

Configure Remote Session	
KVM Encryption	<input type="checkbox"/> Enable
Media Encryption	<input type="checkbox"/> Enable
Virtual Media Attach Mode	Auto Attach <input type="button" value="v"/>

Virtual Media Devices

Virtual Media Devices	
Floppy devices	1 <input type="button" value="v"/>
CD/DVD devices	1 <input type="button" value="v"/>
Harddisk devices	1 <input type="button" value="v"/>
SD Media Support	<input type="checkbox"/> Enable

Mouse Mode Settings

Mouse Mode Settings	
Current Mouse Mode	Relative
Mouse Mode Options	<input checked="" type="radio"/> Relative (Recommended for Linux(Except Redhat6) running on Host) <input type="radio"/> Absolute (Recommended for Windows and Redhat6 running on Host) <input type="radio"/> Other (Recommended for SLES-11 running on Host)

4.5 Power Supply and Heat Radiation

Select “Power Supply and Heat Radiation” on navigation tree, to open the power supply and heat radiation page, which contains three pages of power supply monitoring, power supply management, fan rotation rate control, as shown in the following figure.

- Power supply monitoring: Contains power supply module presence status, alarming status, temperature, input power, output power, input voltage, output voltage, input current, output current and power supply module firmware version information.
- Power supply management: Contains power supply module presence status, current status and primary/secondary mode switching function.
- Fan rotation rate control: Contains fan status, current rotation rate information and rotation rate control function.

 **Note:** Fan rotation rate control contains the following rotation rate gears:

- ★ Low speed gear: About 20% duty ratio.
- ★ Medium speed gear: About 50% duty ratio.
- ★ High speed gear: About 80% duty ratio.
- ★ Full speed gear: 100% duty ratio.

Power Supply Monitor

No.	Present	Alert	Temp(C)	Pin(W)	Pout(W)	Vin(V)	Vout(V)	Iin(A)	Iout(A)	FW Version
PSU0		NO WARNING	34	63	44	223	12.02	0.35	4.43	0.050
PSU1		NO WARNING	40	78	85	230	12.25	0.43	5.26	1.030

Note:


Present Absent

Power Supply Configure

No.	Present	Current State	A/S Switch
PSU0		Active	<input type="button" value="Switch to Standby"/>
PSU1		Active	<input type="button" value="Switch to Standby"/>

Note:

Present Absent

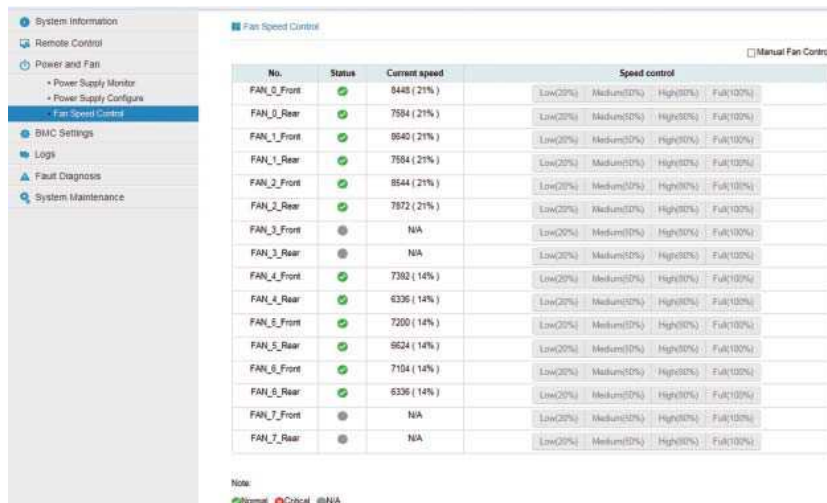

No.	Status	Current speed	Speed control			
FAN_0_Front	✔	8448 (21%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_0_Rear	✔	7584 (21%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_1_Front	✔	8540 (21%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_1_Rear	✔	7584 (21%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_2_Front	✔	8544 (21%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_2_Rear	✔	7872 (21%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_3_Front	⊖	N/A	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_3_Rear	⊖	N/A	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_4_Front	✔	7302 (14%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_4_Rear	✔	6336 (14%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_5_Front	✔	7200 (14%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_5_Rear	✔	8624 (14%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_6_Front	✔	7104 (14%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_6_Rear	✔	6336 (14%)	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_7_Front	⊖	N/A	Low(20%)	Medium(50%)	High(80%)	Full(100%)
FAN_7_Rear	⊖	N/A	Low(20%)	Medium(50%)	High(80%)	Full(100%)

Note: ✔ Normal ⊖ Critical ⊖ N/A

4.6 BMC Configuration

Select “BMC Configuration” on navigation tree, to open the BMC configuration page, which contains 10 pages of “BMC Network”, “Service Configuration”, “NTP Configuration”, “SMTP Configuration”, “Alarming Management”, “Active Directory Configuration”, “LDAP/ E-Directory”, “User Configuration”, “IP Access Control”, “NCSI Network Card Selection”, as shown in the following figure.

- BMC network: Contains network for BMC configuration (static IP and DHCP), DNS configuration and network interface binding function.
- Service configuration: Configures BMC’S Web service, KVM service, ssh service and telnet service etc.
- NTP configuration: Sets BMC time, which has two methods:
 - ★ One is to synchronize from NTP server.
 - ★ The other is to configure time manually.
- SMTP configuration: Sets SMTP server information related to alarming.
- Alarming management: Sets information about BMC management module alarming event filtering and alarming targets etc.
- Active directory configuration: Carries out related configuration on BMC active directory.
- LDAP/E-Directory: Carries out related configuration on BMC’s LDAP.
- User configuration: Carries out management on BMC users, including add user, delete user and change password.

- IP access control: Configures IP address fields accessible to BMC.
- NCSI network card selection: Includes NCSI network card switching, and NCSI work mode switching functions.

BMC Network Management

Network DNS Network Interface Bonding

LAN Interface

LAN Settings Enable

MAC address

IPv4 Configuration

Obtain an IP address automatically Enable DHCP

IPv4 Address

Subnet Mask

Default gateway

VLAN Configuration

VLAN Setting Enable

VLAN ID

VLAN priority

Services

#	Service Name	Current State	Interfaces	Nonsecure Port	Secure Port	Timeout(s)	Maximum Sessions	Active Sessions
1	web	Active	both	80	443	1800	20	1
2	kvm	Active	both	7582	7578	N/A	5	0
3	cd-media	Active	both	5120	5124	N/A	1	0
4	fd-media	Active	both	5122	5126	N/A	1	0
5	hd-media	Active	both	5123	5127	N/A	1	0
6	ssh	Inactive	N/A	N/A	22	600	N/A	N/A
7	telnet	Inactive	N/A	23	N/A	600	N/A	N/A

NTP Settings

NTP Settings

Date:

Time: hh:mm:ss

UTC TimeZone:

NTP Server:

Automatically synchronize Date & Time with NTP Server

SMTP Settings

LAN Channel	Shared <input type="checkbox"/>
Sender Email	<input type="text"/>

Primary SMTP Server

SMTP Support	<input checked="" type="checkbox"/> Enable
SMTP Server IP Address	<input type="text"/>
Username	<input type="text"/>
Password	<input type="text"/>

Secondary SMTP Server

SMTP Support	<input checked="" type="checkbox"/> Enable
SMTP Server IP Address	<input type="text"/>
Username	<input type="text"/>
Password	<input type="text"/>

Save Reset

Alert Settings

SNMP Trap Configure

Trap Version	v1 <input type="checkbox"/>
Community	public <input type="text"/>
Username	<input type="text"/>
Engine ID(Hex)	<input type="text"/>
Authentication and password	NONE <input type="checkbox"/> <input type="text"/>
Privacy and password	NONE <input type="checkbox"/> <input type="text"/>
System Name	<input type="text"/>
System ID	<input type="text"/>
Host Location	<input type="text"/>
Contact	<input type="text"/>
Host OS	<input type="text"/>

Save Reset

Alert Policy Configure

No.	Event Filter(Severity/Type/Name)	LAN Channel	Alert Type	Destination	Action
<input type="checkbox"/> 1	All Events / All Sensors / Any	Shared <input type="checkbox"/>	Trap <input type="checkbox"/>	0.0.0.0 <input type="text"/>	Save Reset Test
<input type="checkbox"/> 2	All Events / All Sensors / Any	Shared <input type="checkbox"/>	Trap <input type="checkbox"/>	0.0.0.0 <input type="text"/>	Save Reset Test
<input type="checkbox"/> 3	All Events / All Sensors / Any	Shared <input type="checkbox"/>	Trap <input type="checkbox"/>	0.0.0.0 <input type="text"/>	Save Reset Test

Active Directory Settings

The 'Active Directory' is currently disabled. To enable Active Directory and configure its settings. Click on 'Advanced Settings' button.

Advanced Settings

The list below shows the current list of configured Role Groups. If you would like to delete or modify a role group, select the name in the list and press Delete Role Group or Modify Role Group. To add a new Role Group, select an unconfigured slot and press Add Role Group.

Role Group ID	Group Name	Group Domain	Group Privilege
1	~	~	~
2	~	~	~
3	~	~	~
4	~	~	~
5	~	~	~

Add Role Group Modify Role Group Delete Role Group

LDAP/E-Directory Settings

LDAP/E-Directory is currently disabled. To enable LDAP/E-Directory and configure its settings, click on 'Advanced Settings' button.

[Advanced Settings](#)

The list below shows the current list of configured Role Groups. If you would like to delete or modify a role group, select the name in the list and press Delete Role Group or Modify Role Group. To add a new Role Group, select an unconfigured slot and press Add Role Group.

Role Group ID	Group Name	Group Search Base	Group Privilege
1	~	~	~
2	~	~	~
3	~	~	~
4	~	~	~
5	~	~	~

[Add Role Group](#) [Modify Role Group](#) [Delete Role Group](#)

User Management

Number of configured users: 1

UserID	Username	UserAccess	Network Privilege	SNMP Status	Email ID
1	admin	Enabled	Administrator	Disabled	~
2	~	~	~	~	~
3	~	~	~	~	~
4	~	~	~	~	~
5	~	~	~	~	~
6	~	~	~	~	~
7	~	~	~	~	~
8	~	~	~	~	~
9	~	~	~	~	~
10	~	~	~	~	~
11	~	~	~	~	~
12	~	~	~	~	~
13	~	~	~	~	~
14	~	~	~	~	~
15	~	~	~	~	~
16	~	~	~	~	~

[Add User](#) [Modify User](#) [Delete User](#)

IP Access Control

IP Access Control

IP Access Control Disabled. All IP will Accepted to this Device.

Add IP Accept Entry

To [ADD](#)

Current IP Accept Entry List

[Enable IP Entry List](#)

BMC Share NIC Switch

Enable BMC Share NIC Enable

NOTE: BMC should be reboot to enable switched share NIC!

Share NIC Switch

Share NIC Switch

[Save](#) [Reset](#)

Network Interface Switch

Management Network Mode Switch Auto Failover Manual Switch

Channel Number

[Save](#) [Reset](#)

4.7 Logs

Select “Logs” on navigation tree, to open related log page, which contains four pages of “System Event Logs”, “BMC System Design Logs”, “Black Box Logs”, “Event Logs Configuration”, “BMC System Audit Logs Configuration”, as shown in the following figures.

- System event logs: Displays various event logs generated by server.
- BMC system audit logs: Displays system logs and audit logs of BMC.
- Black box logs: Used to import fault logs.
- Event logs configuration: Sets BMC logs storage strategies:
 - ★ Linear strategy: To clean all logs after log storage is full and record again.
 - ★ Circulation strategy: To record circularly after log record is full.
- BMC system audit logs configuration: Sets information about BMC system audit logs storage methods and lengths etc.

System Event Log

All Events filter by All Sensors Severity: All Events

BMC Timezone Client Timezone UTC Offset: (GMT +08:00)

Event ID	Time Stamp	Severity	Sensor Name	Sensor Type	Description
756	01/15/2015 11:08:10	Information	Other	System Boot / Restart Initiated	System Restart - Asserted
755	01/15/2015 11:06:50	Information	Other	OS Boot	Boot Completed - Boot Device Not Specified - Asserted
754	01/15/2015 11:05:40	Information	Other	System Boot / Restart Initiated	System Restart - Asserted
753	01/15/2015 11:04:20	Information	Other	OS Boot	Boot Completed - Boot Device Not Specified - Asserted
752	01/15/2015 11:03:10	Information	Other	System Boot / Restart Initiated	System Restart - Asserted
751	01/15/2015 11:01:35	Information	Other	OS Boot	Boot Completed - Boot Device Not Specified - Asserted
750	01/15/2015 11:00:26	Information	Other	System Boot / Restart Initiated	System Restart - Asserted
749	01/15/2015 10:59:00	Information	Other	OS Boot	Boot Completed - Boot Device Not Specified - Asserted
748	01/15/2015 10:57:50	Information	Other	System Boot / Restart Initiated	System Restart - Asserted
747	01/15/2015 10:56:24	Information	Other	OS Boot	Boot Completed - Boot Device Not Specified - Asserted

Export Log Clear Log

Note:
 Information Warning Critical

BMC System Audit Log

BMC System Logs BMC Audit Log

Alert UTC Offset:(GMT+08:00) Event entries: 1

Event ID	Time Stamp	HostName	Description
1	Jan 14 15:21:33	6C92BF0C3392	kernel: Helper Module Driver Version 1.2

Export Log Clear Log

Black Box Log

Log Selection	blackbox.log
---------------	--------------

Event Log Setting

Current Event Log Policy	Circular Policy
System Event Log Policy Options	<input type="radio"/> Linear Policy <input checked="" type="radio"/> Circular Policy

System and Audit Log Settings

System Log	<input checked="" type="checkbox"/> Enable
Log Type	<input checked="" type="radio"/> Local Log <input type="radio"/> Remote Log
File Size (in bytes)	50000
Rotate Count	0
Server Address	
Audit Log	<input checked="" type="checkbox"/> Enable

4.8 Fault Diagnosis

Select “Fault Diagnosis” on navigation tree, to open fault diagnosis page, which contains three pages of “Task Restart”, “Last Crash Screen” and “System Power On Self test codes”. As shown in the following figure.

- Task restart: Contains restart two functions of restarting BMC and restarting KVM service;
- Last crash screen: Used to capture information on the last screen at system crash; Note: Blue screen only adapts to Windows 2008R2 and Windows 2012 OS;
- System power on self test codes: Displays power-on codes during system startup.


BMC Recovery

BMC Recovery Options	<input checked="" type="radio"/> BMC Warm Reset <input type="radio"/> KVM Service Restart
----------------------	--

Last Crash Screen

This page will display the crash screen captured during failure happened in the host system.

Note: This last crash screen feature requires the managed system with the auto recovery feature configured.

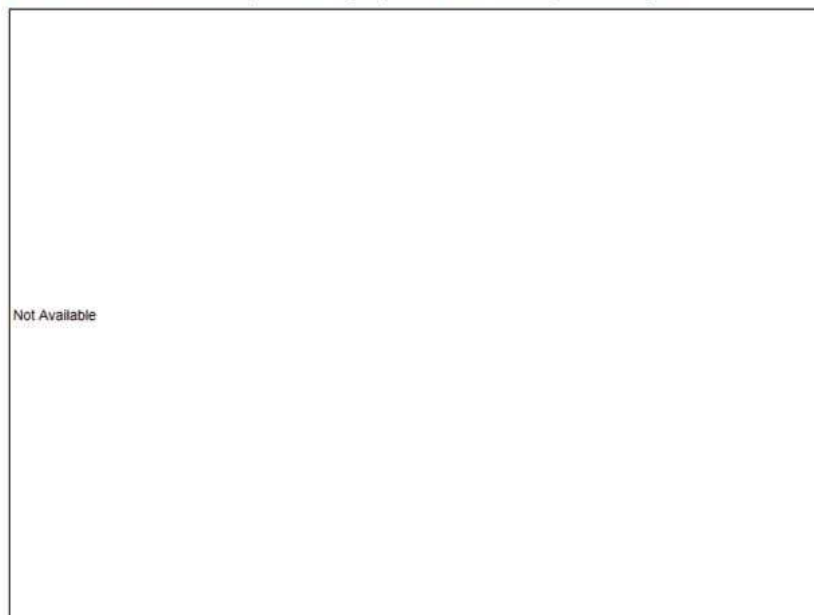

Host POST Code

Host POST Code	
Current Power Status	ON
Current POST Code	79
POST Code Records	02 03 02 03 06 04 19 a1 a3 a3 a3 a3 a3 a7 a9 a7 a7 a7 a7 a8 a9 a9 a9 aa aa aa ae af b0 b0 b0 b0 b0 b0 b0 b0 b0 b0 b0 b0 b1 b1 b1 b1 b4 b4 b4 b4 b2 b1 b1 b1 b1 b1 b1 b1 b1 b1 b1 b3 b3 b3 b6 b7 bd bd bd bd b7 bd bd bd bd bd bd bd bd bd bd bd bd bd b7 b7 b7 b7 bd bd bd bd b7 bd b7 b7 b7 b7 b8 b7 b7 b7 b7 b9 ba b7 b7 bb bb bb bb bb bb bb bb bc bc bc bc bc bc bc bc bc bc bf 33 32 4f 61 9a 78 68 70 79

4.9 System Maintenance

Select “System Maintenance” on navigation tree, to open system maintenance page, which contains four pages of “BMC Firmware Update”, “BIOS Firmware Update”, “Restore Factory Configuration” and “System Administrator”. As shown in the following figures.

- BMC firmware update: Carries out update on BMC FW via BMC Web interface;
- BIOS firmware update: Carries out update on BIOS via BMC Web interface;
- Restore factory configuration: Restores BMC’s configuration to factory state.
- System administrator: Displays the information of system administrator.

BMC Firmware Update

Please note:

1. After entering update mode widgets, other web pages and services will not work. All open widgets will be closed automatically. If upgrade process is cancelled in the middle of the wizard, the device will reset.
2. Click 'Preserve all configuration' will preserve all the configuration settings during the firmware update.
3. This section lists the configuration items, items that configured as 'Preserve' will be preserved during restore factory default configuration. Click 'Preserve Configuration' to modify the preserve configuration items.
4. Click 'Enter Firmware Update Mode' to update firmware.

Preserve all configuration

NO.	Preserve Settings	Update Policy
1	SDR	Overwrite
2	FRU	Overwrite
3	SEL	Overwrite
4	IPMI	Overwrite
5	Network	Overwrite
6	NTP	Overwrite
7	SSH	Overwrite
8	KVM	Overwrite
9	Authentication	Overwrite

Enter Preserve Configuration

Enter Firmware Update Mode

BIOS Firmware Update

Please note:

- (1) **Power Off** the system if you want to do BIOS Update.
- (2) BIOS NVRAM will be cleared and BIOS will become default after BIOS flashed.
- (3) After BIOS+ME flashed, we recommend to **AC Power Off and On** to enable NEW ME.

1. Please click the button to enter firmware update mode.

Current Power Status

● ON (Click here to Power Off Server)

BIOS Bin File Type:

BIOS+ME

Enter Firmware Update Mode

Restore Factory Defaults

1. Please note that after entering into restore factory defaults, widgets, other web pages and services will not work. All open widgets will be closed automatically. The device will reset and reboot within few minutes.
2. This section lists the configuration items, items that configured as 'Preserve' will be preserved during restore factory default configuration. Click 'Preserve Configuration' to modify the preserve configuration items.
3. Click 'Restore Factory Defaults' after configuring preserve items.

NO.	Preserve Settings	Update Policy
1	SDR	Overwrite
2	FRU	Overwrite
3	SEL	Overwrite
4	IPMI	Overwrite
5	Network	Overwrite
6	NTP	Overwrite
7	SSH	Overwrite
8	KVM	Overwrite
9	Authentication	Overwrite

Enter Preserve Configuration

Restore Factory Defaults

4.10 Command Line Function Introduction

About this chapter

It introduces Web interface of management system as well as operation steps to login Web interface.

- Login command line
Introduces methods of login command line.
- Command line function introduction Introduces command line functions.

4.10.1 Command line login:

Command line using ssh to login BMC, default user name: root, and default password: rootuser.

```
login as: root
root@10.53.11.240's password:
Executing [-/usr/local/bin/smashclp]
```

After login, you could enter the command line interface:

```
>> smashclp <<
////////////////////////////////////
smashclp cli tool version 0.9
Enter 'help' for a list of built-in commands
////////////////////////////////////

/splashclp>
```


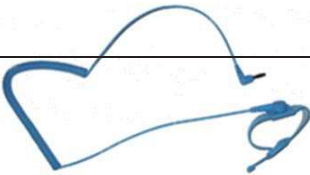

Enter help, you could view online help:

```
/smashclp> help
Built-in command:
-----
ipoonfig:    get or set network parameters, please enter <ipoonfig --help> for more information
sensor :    get or set sensor parameters, please enter <sensor --help> for more information
fru :       get or set fru parameters, please enter <fru --help> for more information
chassis :   get or set chassis parameters, please enter <chassis --help> for more information
user :      get or set user parameters, please enter <user --help> for more information
mc :        get or set mc parameters, please enter <mc --help> for more information
fan :       get or set fan parameters, please enter <fan --help> for more information
psu :       get or set psu parameters, please enter <psu --help> for more information
password:   change root password
exit :      exit the command line
/splashclp>
```

5 Hardware Maintenance

5.1 Tool Preparation

- Tools to be prepared before construction, as shown in the following table. Tool List

Illustration	Name	Description
	Phillips Screwdriver	Used to fix bolts.
	Anti-static Wrist Strap	Used to contact or operate devices and apparatuses, to prevent static electricity.
	Anti-static Gloves	Used to plug in single board, hand-held single board or other precision instruments etc., to prevent static electricity.

5.2 Parts Replacement

Special tips: Except hot plugging parts (i.e. hot plugging hard disk etc.), all part replacements could only be carried out with power disconnected.

5.2.1 Processor Replacement


During installing and replacing CPU, please pay attention to the following issues:

- During installing two CPUs, type of these two CPUs shall be the same.
- When only one CPU is to be installed, please operate according to the following requirements:
 - 1) This CPU has to be installed on CPU0's socket, and see [Mainboard Diagram] for


CPU position.

2) It is not allowed to dismantle the protective cover on sockets without CPU1 installed.


Step 1: Open two pull rods on CPU slot, and open CPU fixing plate.

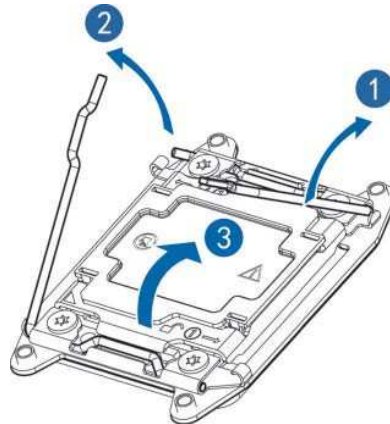

Step 2: Install CPU into CPU slot, and then remove protective cover on CPU slot.

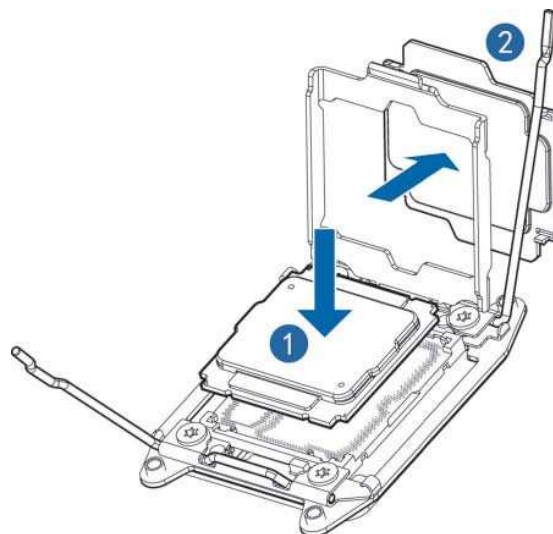


Step 3: Clamp CPU with CPU fixing plate, and then fix two pull rods firmly.

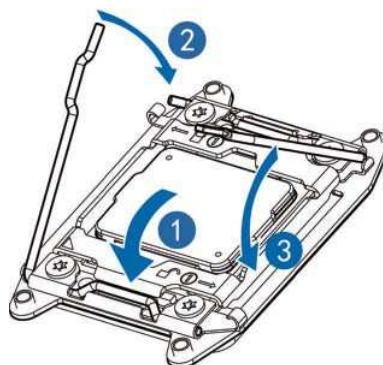

Step 4: Fix CPU heat radiator above CPU, and fasten bolts on heat radiator.


 **Note:**

- It is required to coat thermal grease evenly onto contact position between CPU heat radiator and CPU.
- During fixing CPU heat radiator, it is required to fasten bolts according to diagonal sequence accordingly.

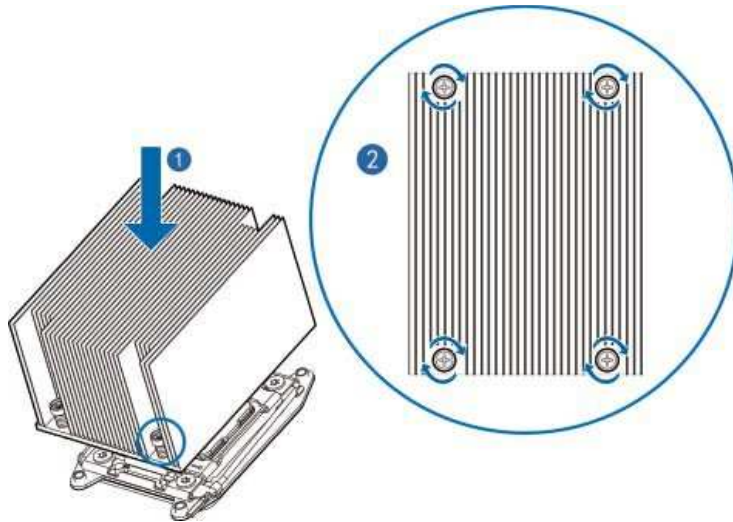

5.2.2 Memory Replacement

- Memory slot layout is as shown in the following figure:

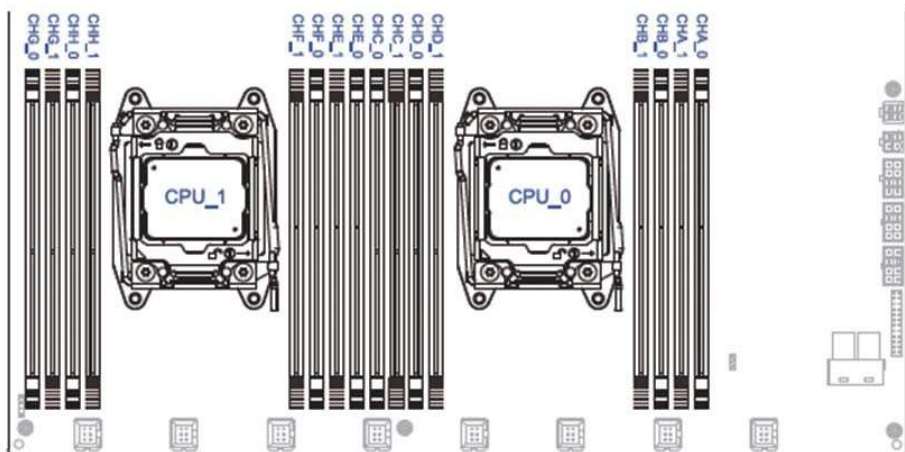

- Memory installation principle:

Only memory of the same type could be used in the same machine. Detailed memory installation and combination principles are as follows:

a、 The white slot shall take the priority, while CPU1 memory shall be symmetrically

installed with CPU0.


b、 For single CPU, memory shall follow the screen printing sequence: CHA-0, CHB-0,

CHC-0, CHD-0, CHA-1...

c、 For dual CPUs, CPU0 position memory shall follow the screen printing sequence: CHA-0, CHB-0, CHC-0, CHD-0, CHA-1... CHG-0, CHH-0, CHE-0, CHF-0 ...


Step 1: Open fixing catches on both ends of memory slot.

Step 2: Align the notch at memory bottom with memory slot positioning point, and press both ends of the memory with your thumbs, to insert the memory into the slot completely, and then fasten fixing catches on both ends of the memory slot.

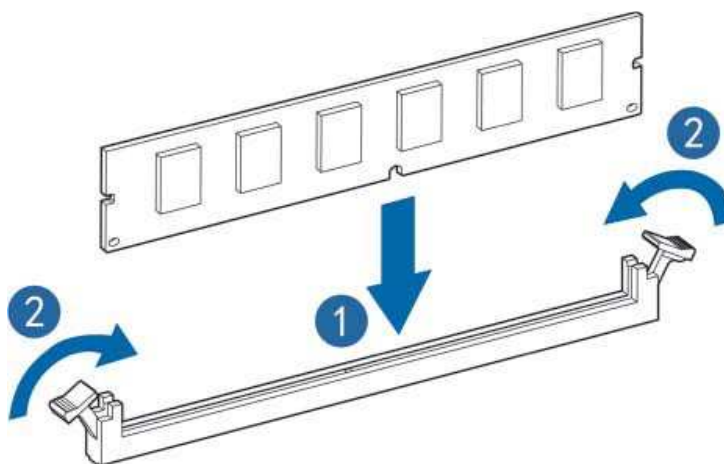


5.2.3 Hard Disk Replacement


Step 1: Press hard disk panel button.

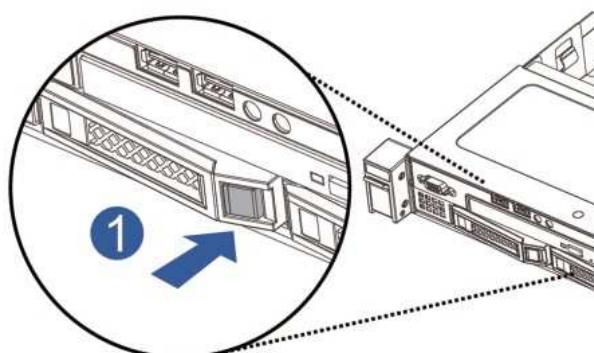

Step 2: Pop up buckles on hard disk bracket automatically, flatten and dismantle hard disk bracket.

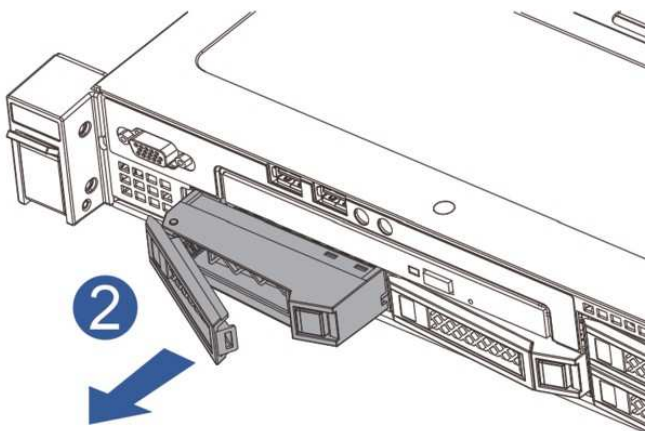


Step 3: Use four hard disk bolts to fix the hard disk onto the bracket.

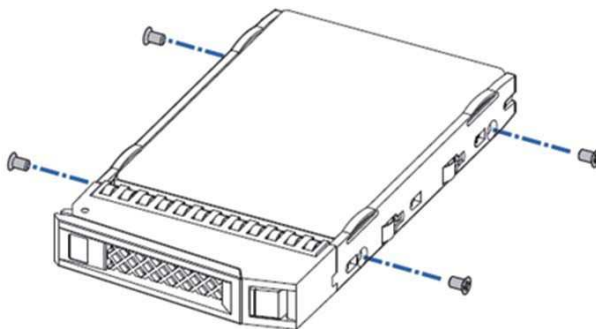


Step 4: Install the hard disk into the server, and fasten hard disk buckles firmly.

5.2.4 Power Replacement

Step 1: Pull power catch in the direction of the arrow.

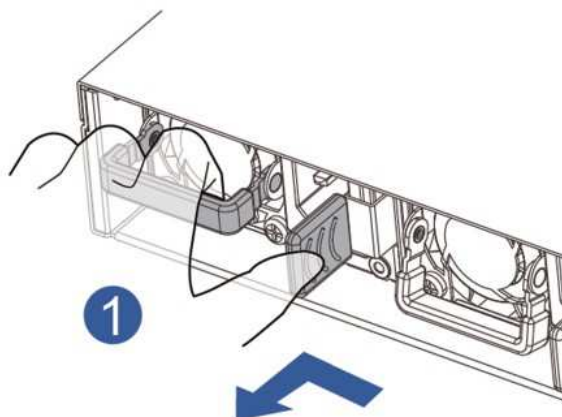

Step 2: Remove the power horizontally with even force.

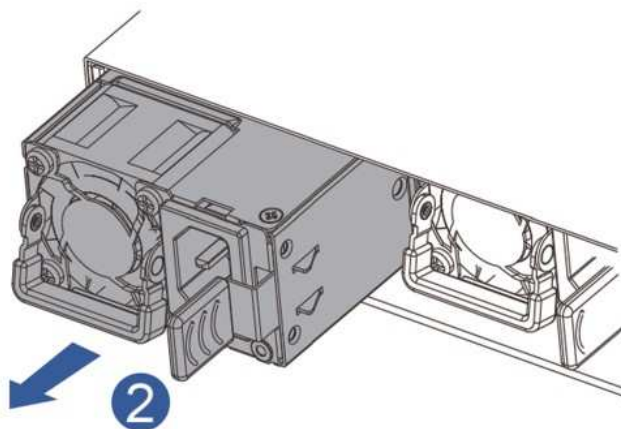


Step 3: Install power module.

Push the new power module into the sliding channel, until a “click” sound is heard, power spring leaf is caught into the buckle automatically, and power module could not move any more.

5.2.5 Chassis Cover Replacement


Step 1: Press the two lock catches on the chassis cover, and push them horizontally to the rear of the chassis, to make the chassis rear cover leave the front window cover about 1cm.

Step 2: Vertically remove the chassis cover upwards.

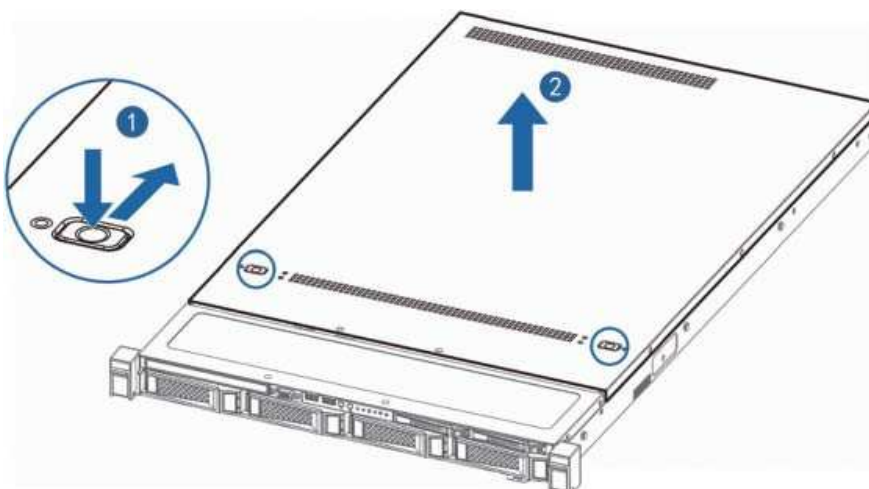


5.2.6 System Fan Replacement

Hold both ends of the fan, and lift up vertically. Non-hot plug fan:

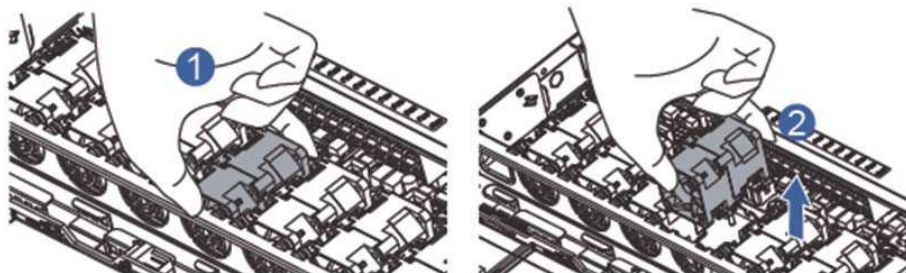


Hot-plug fan:

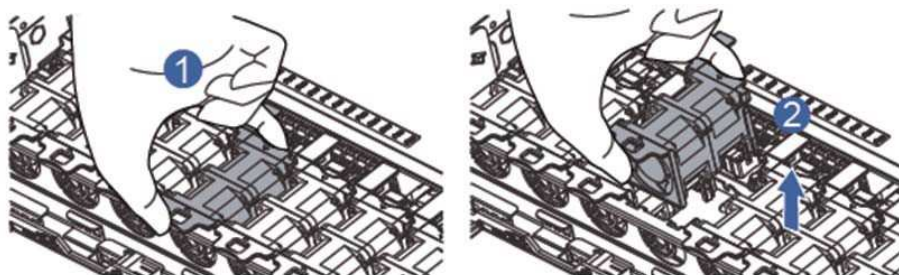


5.2.7 Replace Riser Card and PCIE Expansion Card

Step1: Hold the two holes on the Riser card, uplift the Riser card vertically.

Step 2: Remove the screws on PCIE expansion card, take out PCIE expansion card outwards.

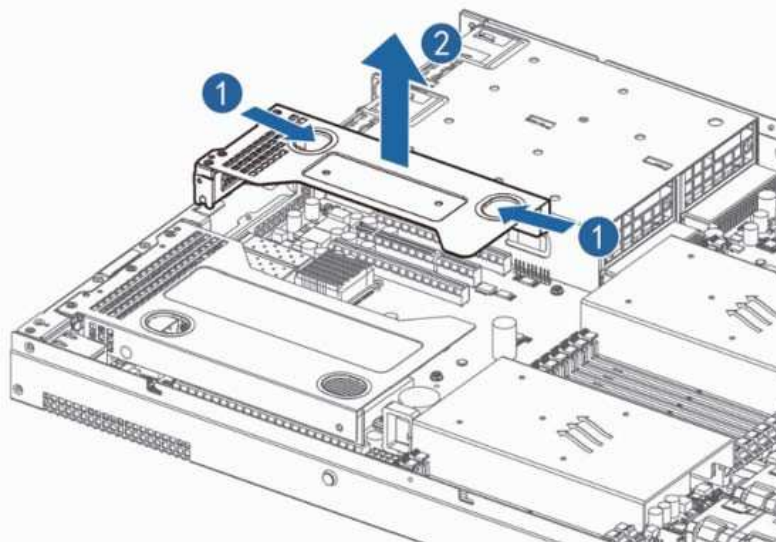


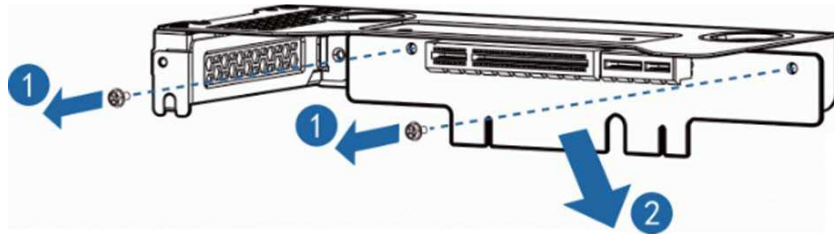

5.2.8 Wind Scooper Replacement

Step 1: Open upper cover of the chassis.


Step 2: Vertically remove the wind scooper upwards.

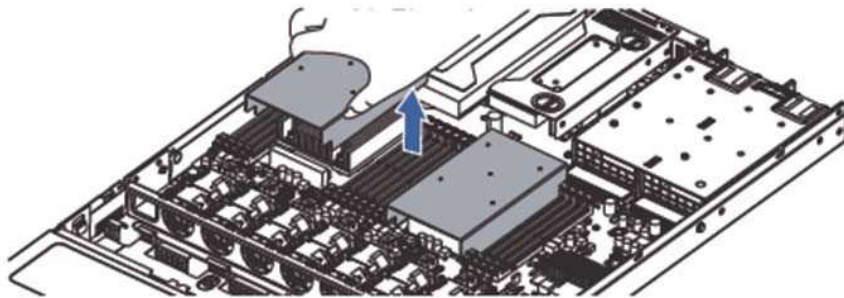

5.2.9 Mainboard Replacement

Step 1: Dismantle all parts and cables connecting to mainboard.


Step 2: Dismantle 10 screws on the mainboard, lift mainboard ring-shaped handle, and vertically remove the mainboard upwards.

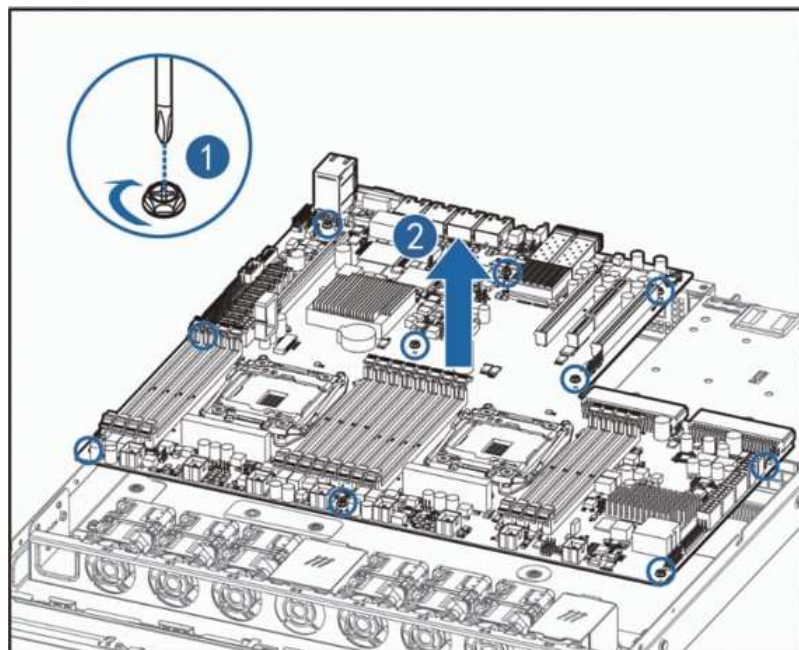

5.2.10 Replace Hard Disk Backplane


Replace hard disk backplane without tools:

Steps: Depart hard disk backplane from fixed legs of the chassis, vertically remove the chassis buckles upwards, and then remove the hard disk backplane outwards.

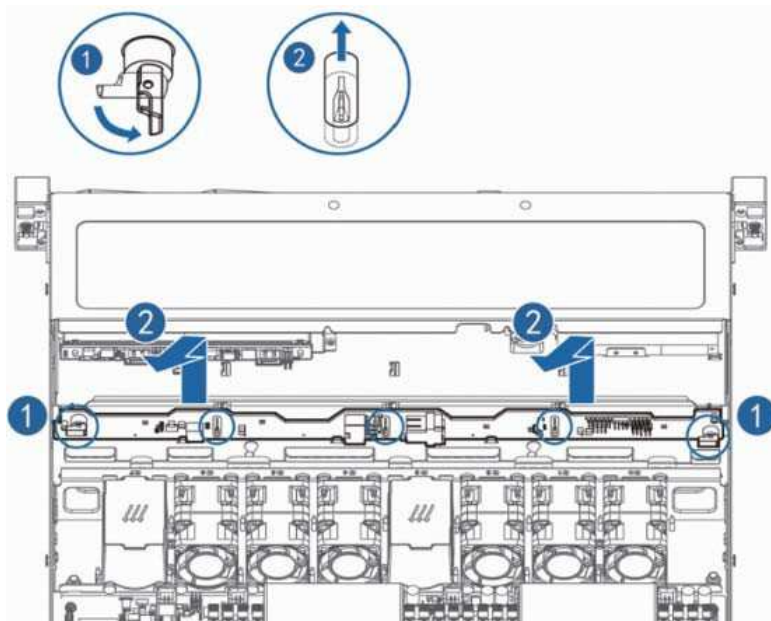

Replace hard disk backplane with lock screws:

Steps: Remove the screws on the hard disk backplane, and then remove the hard disk backplane outwards.

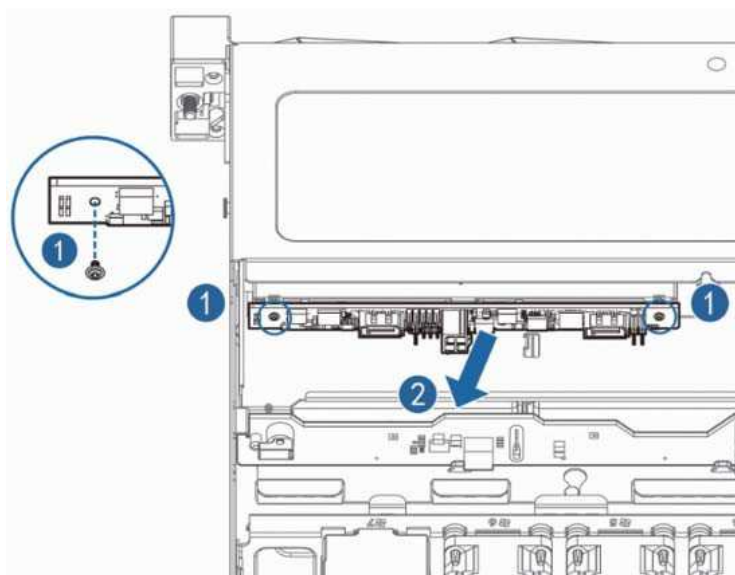

6. Frequent Faults, Diagnosis and Troubleshooting

This chapter introduces
Frequent server faults as well as corresponding diagnosis and
troubleshooting suggestions.

6.1 Frequent Faults

1) No power after startup

After the machine is connected with power cable, no power is provided for the machine while pressing the On/Off button, and indicator does not light up after power on.

2) Power module indicator off or red indicator on

The machine is under normal operation, but a certain power module indicator is off or red indicator is on to alarm.

3) No display after power on

No information output appeared on the display after power on via pressing On/Off button.

4) Front panel indicator is off

All front panel indicators are off after power on.

5) Front panel status indicator alarms

The machine is under normal operation, but status indicator alarms.

6) Blank screen of the display

Blank screen fault occurs during display usage.

7) Abnormal display

Trembling, rolling or twisting screen images on the display during machine usage.

8) Memory capacity displays abnormality

It is shown by the operation system that memory capacity does not correspond with physical memory capacity.

9) Keyboard and mouse are not available

Neither keyboard nor mouse could be operated normally.

10) USB interface problem

Introduces solutions to failing to use USB interface.

6.2 Diagnosis and Exclusion Instructions

1) Diagnosis and exclusion on power-on failure at startup

Description: After pressing the power button, server front control panel indicator (power-on status indicator, hard disk status indicator) is off, meanwhile, no KVM (display) output is displayed, and server chassis fan does not rotate.

Operation steps:

- a. Verify whether machine power supply is normal or not: If power module indicator is on, it indicates normal power supply; if power module indicator is off, please check if power supply is normal;
- b. If power supply is normal, plug in and off the power module again to test, and then start for verification;
- c. If there's a machine and a power module of the same type, you could change the power module to test whether there's a power module fault;
- d. If no solution could be achieved via the above operation, please contact the distributor customer service.

2) Power module indicator off or red indicator on

Description: The machine is under normal operation, but a certain power module indicator is off or the red light is on.

Operation steps:

- a. Firstly check whether all power cables are normal, and plug in power cables again;
- b. If fault still exists, plug in and off power module again;
- c. If shutdown is allowed, you could exchange these 2 power modules, to judge whether it is a power module fault.
- d. If no solution could be achieved via the above operation, please contact the distributor customer service.

3) No display if power on

Description: After pressing the power button, server front control panel indicator is on, but there's no output on the display.

Operation steps:

- a. Firstly check whether VGA port on display and server is connected normally;

- b. Test on another display
- d. If no solution could be achieved via the above operation, please contact the distributor customer service.

4) Front panel status indicator alarms

Description: The server is under normal operation, but system status indicator on front control panel flashes or the red indicator is on to alarm.

Operation steps:

Please check whether all power module indicators are green constant, if so, you could login BMC web interface to collect logs, and contact the distributor customer service.

5) Memory capacity incomplete

Description: Memory capacity viewed via the operation system does not correspond with physical memory capacity.

Operation steps:

- a. Ensure all memories have been correctly installed in place, and memories of correct type have also been configured.
- b. Enter BIOS setup to view memory capacity, if it could be completely identified in BIOS setup, this may lie in the limitation on memory capacity set by the operation system. Otherwise, please contact the distributor customer service.

6) Keyboard and mouse are not available

Description: Neither keyboard nor mouse could be operated normally.

Operation steps:

- a. Make sure whether cable connection of keyboard or mouse is correct and firm.
- b. Test other parts to verify whether it is a mouse or keyboard fault.
- c. Retest the machine via power on/off.
- d. Reboot and enter cmos or raid configuration interface to test keyboard or mouse performance, when tested in a non-system situation, if keyboard or mouse performance turns out to be normal, a system fault could be considered; if keyboard or mouse fault still exists, a mainboard interface fault could be considered, and you could contact the distributor technical

7) USB interface problem

Description: Unable to use devices with a USB interface.

Operation steps:

- a、 Make sure operation system on server supports USB devices.
- b、 Make sure system has been installed with correct USB device driver.
- c、 Power off the server, and then power on again to test.
- d、 Make sure whether the USB device is normal when connecting to other hosts.
- e、 If the USB device is normal when connecting to other hosts, the server may be abnormal, please contact the distributor technical support; if the USB device turns out to be abnormal when connecting to other hosts, change the USB device.

7. Specifications

This chapter introduces various access authentications achieved by this product and standards it complies with.

- **USA FCC statement.**

Introduces FCC standards abided by the product.

- **CE statement of EU.**

Introduces CE standards abided by the product.

- **China CCC**

Introduces CCC standards abided by the product.

- **China Environmental Symbols**

Introduces China environmental symbols standards abided by the product.

7.1 USA FCC Statement

Introduces FCC standards abided by the product.

It is regulated in Subpart B, Part 15 of 47 CFR by Federal Communications Commission of the United States that users of this product shall pay attention to the following issues:

Annotations: This device has been tested and complies with regulations related to Class A digital devices in Part 15 of FCC rules. Main purpose of these limitations is to provide reasonable protection while operating such devices in business districts, to avoid harmful disturbance. This device may produce, use and emit RF energy, if installation or usage is carried out not according to instructions, harmful disturbance may be caused on radio communication. Operating this device in residential areas may cause harmful disturbance, in this case, the user will be responsible for all costs arisen from correcting disturbance.

If the user carries out change or correction not expressly indicated by our company, it may cause the device failing to comply with FCC Class A requirements, and exempted from its authorization to operate this device.

7.2 CE Statement of EU

This chapter introduces CE standards abided by this product.

This is a Class A product. In the dwelling environment, this product may cause radio disturbance, in this case, the user will be asked to adopt certain appropriate measures.

7.3 China CCC

This chapter introduces the CCC standards to be abided by the product.

This product is a class A product, in daily life, it may cause radio disturbance, in this case, it is required to adopt practicable precautions against its disturbance.

7.4 China Environmental Symbols

The products comply with China environmental symbols criteria.

Name of Hazardous Substances or Elements in the Product & Content Mark Table – Server

Part Name	Toxic and Harmful Substances or Elements					
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Case	x	o	o	o	o	o
Mainboard	x	o	o	o	o	o
Memory	o	o	o	o	o	o
Hard Disk	o	o	o	o	o	o
Power Supply	x	o	o	o	o	o
Cable	o	o	o	o	o	o
Floppy drive	x	o	o	o	o	o
CD Drive	x	o	o	o	o	o
External Plug-in Net Card	x	o	o	o	o	o
External Plug-in Storage	o	o	o	o	o	o
Connection Plate Card	x	o	o	o	o	o
Data Cable	x	o	o	o	o	o
Keyboard	x	o	o	o	o	o
Mouse	x	o	o	o	o	o
Central Processor	x	o	o	o	o	o
Processor Radiator	x	o	o	o	o	o
Rail	o	o	o	o	o	o
Printing	o	o	o	o	o	o
CD	o	o	o	o	o	o
Package	o	o	o	o	o	o
Packing Pads	o	o	o	o	o	o
Packing Plastic Bags	o	o	o	o	o	o

Instructions:

1. o: Indicates content of hazardous substances in all homogenous materials of this part is below limit regulated in Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products.

2. x: Indicates content of hazardous substances in at least one homogenous material of this part is below limit regulated in Requirements for Concentration Limits for Certain Hazardous Substances in Electronic Information Products. In the table, “x” indicates printed board welding technique limit fails to reach limit requirements.

3. All the above parts are possible configuration parts in product, for actual product

